

Surround



Quick Start Guide

Octane-100

2.1 Channel Sound Bar with Wired Subwoofer

I. Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the power cord of the speaker when unused for long periods of time or during lightning/thunderstorms.
4. Do place the speakers on a stable surface and keep out of reach from children.
5. To avoid any shock hazards, we recommend not to remove the cover, dismantle the unit or even insert any object in the unit.
6. It is recommended to refer all servicing to qualified personnel only. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

 
II. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

III. In the box

- 1 x FINGERS Octane-100 (Sound Bar)
- 1 x FINGERS Octane-100 (Sub-woofer)
- 1 x Remote Control
- 1 x AUX Cable
- 1 x Screw Set
- 1 x Quick Start Guide
- 1 x Brand Note

IV. On-board Controls

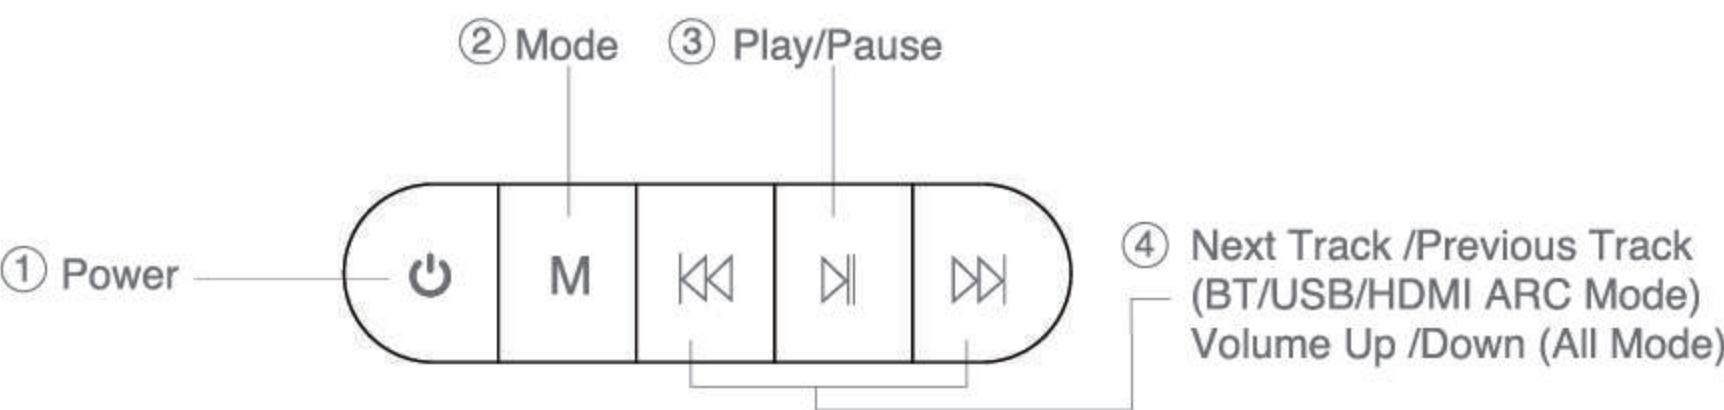

#	Function	Operations
1	Power On/ Stand-by	Short press - To switch between stand-by & operational mode
2	Mode	Short press - To switch between BT USB HDMI(ARC) Optical AUX Coaxial Mode
3	Play/Pause	Short Press - To Play/Pause
4	Next Track/ Increase Volume	Short Press - To navigate to Next track (in BT/USB/HDMI ARC modes) Long Press - To increase the volume level (in all modes)
4	Previous Track/ Decrease Volume	Short Press - To navigate to previous track (in BT/USB/HDMI ARC modes) Long Press - To decrease the volume level (in all modes)

LED display

BT | USB | AUX | OPT | ARC | COA

Displays details of Mode input, Equalizer, Volume levels, Tracks, etc.

Details:

1. LED: Standby mode

2. BT: In BT mode

 
3. USB: In USB mode

4. AUX: Auxiliary input mode
5. OPT: Optical mode

6. ARC: HDMI(ARC) mode

7. COA: Coaxial mode


V. Connections

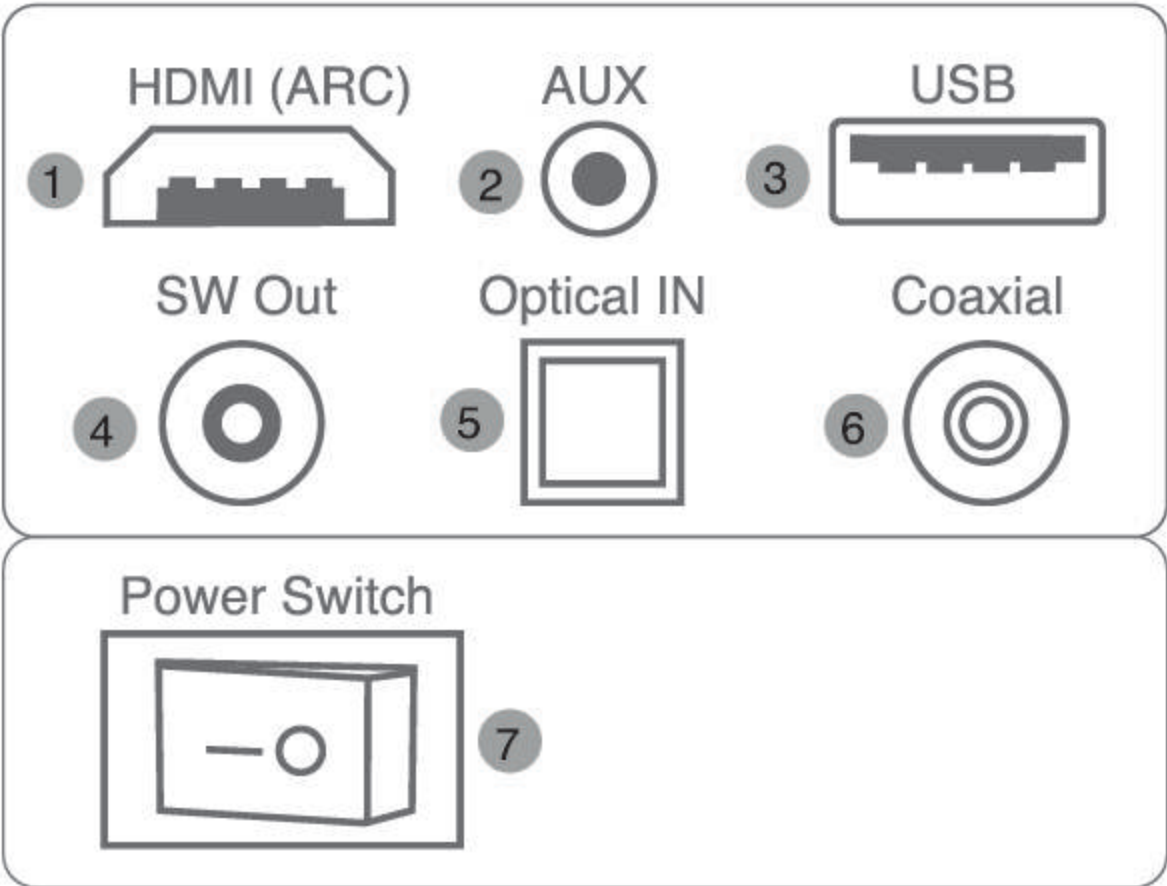


- | # | Connection |
|---|----------------|
| 1 | HDMI (ARC) |
| 2 | AUX IN |
| 3 | USB Port |
| 4 | Sub-Woofer Out |
| 5 | Optical IN |
| 6 | Coaxial |
| 7 | Power Switch |

VI. Connect the Sound Bar

 A. Power your system

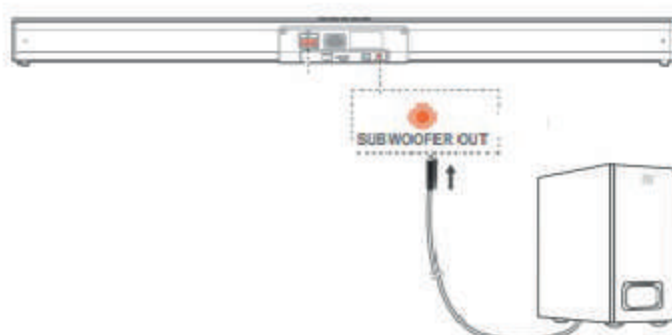

 i. Connect the Sub-woofer to the Sound Bar

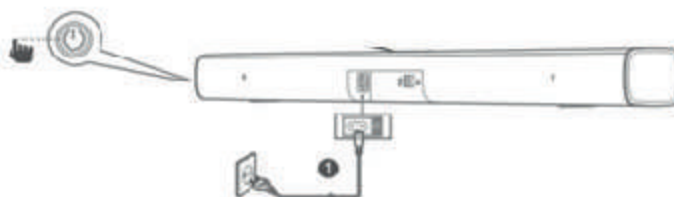


ii. Plug the power cord of Sound Bar into the Socket




iii. Insert AAA batteries in the remote

 B. Connect to TV

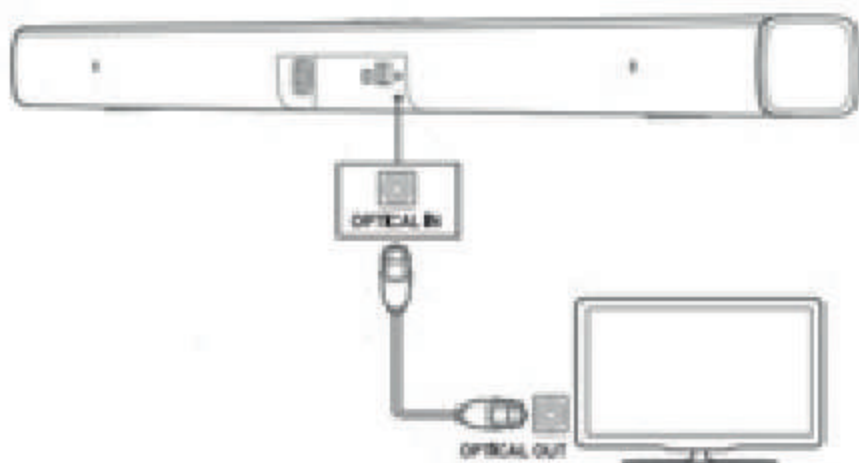

 
C. Connect to other devices

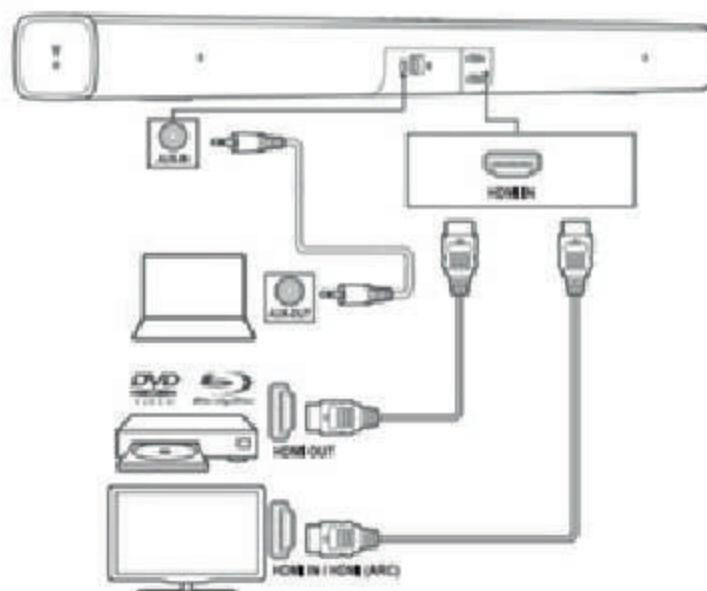

D. Placement of Sound Bar & Wireless Sub-Woofer



a) On Table/ Flat Surface

 - Place the Sound Bar on the table/flat space.
- Do not place the Sub-woofer near any object. Recommend to maintain a distance of 20 to 25 cm.

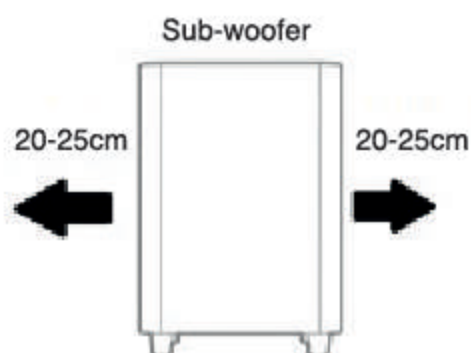


b) Wall Mounting

  Fix the screw on the wall with Wall-mounting brackets and screw set provided. Hook the Sound Bar on the wall.

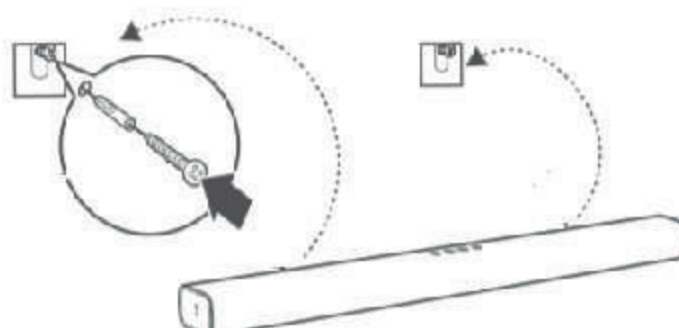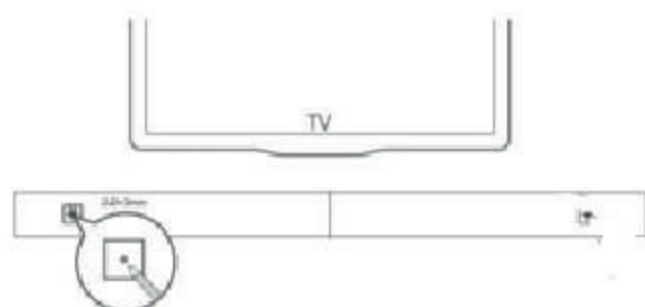

VII. Remote Control

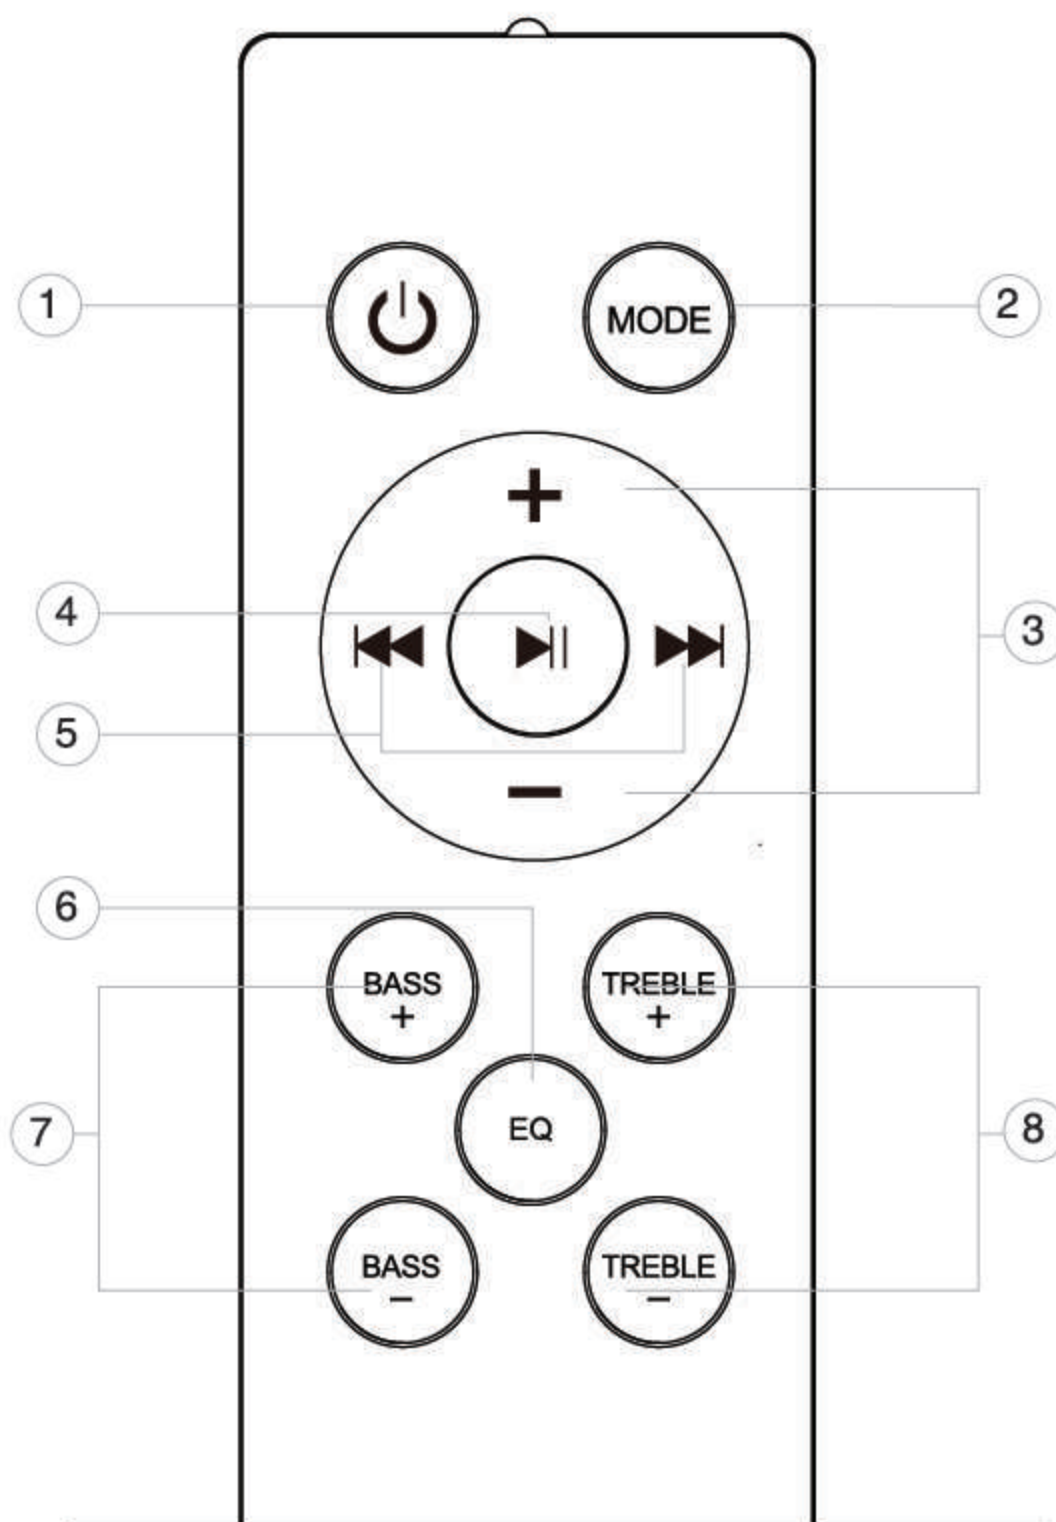 

1. Power/Stand-by: To switch between stand-by and operational mode
2. Mode: To navigate among various playback modes of Bluetooth, USB, AUX, Optical, Coaxial and HDMI (ARC)
3. VOL +/-: To adjust volume level of the speaker system
4. Play/Pause: In BT/USB/ HDMI(ARC) - To Play/Pause current track
In AUX /Optical/ Coaxial mode - As Volume Mute function
5. Next Track/Previous Track: To select Previous/Next Track in
BT/USB/HDMI ARC mode
6. EQ: Short Press: To select different equalizers
Music (EQ1),Movie (EQ2) and News (EQ3)
Long press: To enable 3D effect ON/OFF
7. Bass +/- : To adjust bass levels of the speaker system
8. Treble +/-: To adjust treble levels of the speaker system

 
VIII. Modes

You can enjoy your music in the following ways

i. BT ii. USB iii. AUX iv. Optical v. HDMI(ARC) vi. Coaxial

i. BT

- Press on the mode button till the voice prompt of the word “BT mode” is heard.
- The LED screen highlights “BT” signifying that it is ready to pair a device.
- Make sure that Bluetooth is enabled on your device.
- Find the device list and select FINGERS Octane-100.
A sound prompt of “Connected” is heard and it is ready to play.

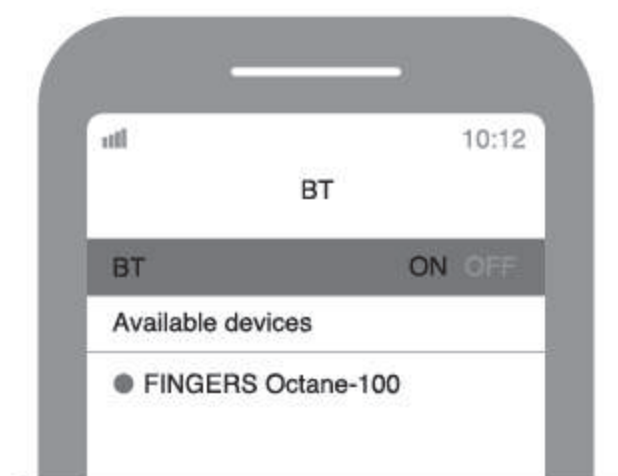

ii. USB

- Insert the USB device (Pen Drive) in the provided port.
- Press the (M) till the voice prompt of the word “USB mode” is heard.
- You can then play your favourite tracks directly from the USB Disk.

iii. AUX

- If you wish to listen to music from mobile devices, plug in the AUX cable in the AUX port.
- Press the (M) till the voice prompt of the word “AUX mode” is heard.
- You can then stream music directly from your mobile devices.

iv. Optical

- If you wish to listen to music from TV or other devices with Optical out, plug in the Optical cable in the Optical port.
- Press the (M) till the voice prompt of the word “Optical mode” is heard.
- You can then stream music directly from your devices.

v. HDMI (ARC)

- If you wish to listen to music from TV or other devices with HDMI ARC out, plug in the HDMI ARC compatible cable in the HDMI(ARC) port.
- Press the  button till the voice prompt of the word “HDMI mode” is heard.
- You can then stream music directly from your TV.

vi. Coaxial

- If you wish to listen to music from TV or other devices with Coaxial out, plug in the Coaxial cable in the Coaxial port.
- Press the  button till the voice prompt of the word “Coaxial” is heard.
- You can then stream music directly from your devices.

X. Product Specifications

Parameters	Octane-100
Wireless Protocol	Bluetooth v5.0
Total Output Power	100 W Sub-Woofer: 40W + Sound Bar: 15W x 4 = 60W
Input Power	AC 110 ~ 240 V
BT Supported profiles	A2DP, AVRCP, AVDTP, AVCTP, GAVDP
Driver unit	Sub-Woofer: 1 x 5.25" (6 Ω) Sound Bar: 4 x 2.25" (4 Ω)
Playback Options	Bluetooth USB AUX Optical HDMI ARC Coaxial
BT Frequency Range	2.402 GHz ~ 2.480 GHz
Effective Range	Up to 10 m
Dimensions	Sub-Woofer: 220 x 180 x 293 mm Sound Bar: 859 x 80 x 65 mm
Weight	Sub-Woofer: 2.8 kg / Sound Bar: 2.0 kg
Colors	Rich Black



Ver.: 1.0.0

Stay connected with us



@fingers.co.in



@FingersIndia



@FingersIndia

Customer Service

- Support email: customer.care@fingers.co.in
- 022-4938 7600: Mon - Fri (9.30 am to 6.30 pm)

For further information, please visit www.fingers.co.in

*When connected via BT Mode - you can move around and play music within a wireless range of up to 10 m, with audio fidelity keeping stable and intact throughout.

- Images shown may vary from actual product.
- Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in