



Quick Start Guide

FINGERS Cozy

Wireless NeckBand Earphones

I. Important - Warnings and Safety Instructions

1. While placing the earphone in your ears, please keep the volume down and then gradually adjust the volume to an appropriate, comfortable level.
2. Prolonged use at high volumes might damage your hearing.
3. Focus on your safety and of others. We recommend not to listen music while riding or driving, or at any time when the inability to hear surrounding sounds may present a danger to yourself or others.
4. If you experience a warm sensation or loss of audio, do remove and disconnect immediately.
5. Do not place the NeckBand near heat sources such as fire, radiators, stoves, light candles and other apparatus that produces heat.
6. Use only those accessories supplied by FINGERS.
7. Unplug the NeckBand once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
8. It is recommended to refer all servicing to qualified personnel. Servicing is required when the device has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. Care and Maintenance


1. Switch off the device before cleaning it.
2. Use soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

III. Charging



- A red light indicates that it is in charging mode. Once it is completely charged, the LED glow changes to blue.

IV . On-board Controls

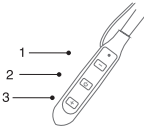

FunctionWhat to do

1. Volume Up/Next Track

- Increase Volume Short Press
- Next Track..... Long Press

2. MFB

- On-Off..... Long Press
- Play/Pause Short Press
- Voice Assistance Press for 2 seconds

During Calls

- Receive call..... Short Press
- End call..... Again Short Press
- Reject incoming call..... Long Press
- Redial Last called number.. Double Press

3. Volume Down/Previous Track

- Decrease Volume..... Short Press
- Previous Track Long Press

V. Bluetooth® Mode

- Switch on the Neckband till the LED indicator starts flashing in blue and red alternately, signifying that it is ready to pair a device



- As it Flashes blue and red alternately, make sure that Bluetooth is enabled on your device. Find the device list and select "FINGERS COZY"
- The indicator flashes in blue for a moment, a sound connected is heard and it is ready to play.
- Repeat above steps to pair another device

Connection with 2 mobile devices simultaneously

- The NeckBand remembers previously 2 connected devices.
- Switch on the NeckBand till the Blue LED light flashes.
- It attempts to reconnect to previously 2 paired devices.

VI. Product Specifications

Parameters	Cozy
Wireless Protocol	Bluetooth V5.3
Input Power Rating	5 V/ 500mA Max
Driver unit	Φ10 mm
Effective Frequency Range	2.402 GHz ~ 2.480 GHz
Effective Range	Up to 10 meters
Battery	200 mAh
Charging Time	Up to 2 Hrs 30 Minutes
Playback Time*	Up to 40 hours
TalkTime*	Up to 15 hours
Standby Time*	Up to 40 hours
Dimensions	150 x 15 x 170 mm L x W x H
Weight	30 g

VII. In the box

1 x FINGERS COZY

1 x USB Charging Cable

1 x Extra Ear-gels; S, L sizes

1 x Quick Start Guide

1 x Brand Note

¹Tested under ideal conditions and varies depending on usage and volume levels.

²Tested under limited conditions. Do not immerse it in liquid.

- Images shown may vary from actual product.
- Specifications, features and appearance are subject to change without notice.
- All logos, brands, trademarks and product names are properties of their respective owners.
- Product warranty is governed by warranty terms mentioned on www.fingers.co.in
- This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in