

fingers[®]



Quick Start Guide

RollingParties-51
Multimedia Speaker

I. Important - Warnings and Safety


1. Do not place the speaker & Mics near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker/Mic once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box

1 x FINGERS RollingParties-51 Speaker	4 x AA Battery for Mic
2 x FINGERS Freedom Mic-39 Wireless Microphones	2 x AAA Battery for Remote Control
1 x Audio Cable	1 x Quick Start Guide
1 x Power Cord	1 x Brand Note
1 x Remote Control	


III. On-board Controls & Connections

A. Speaker

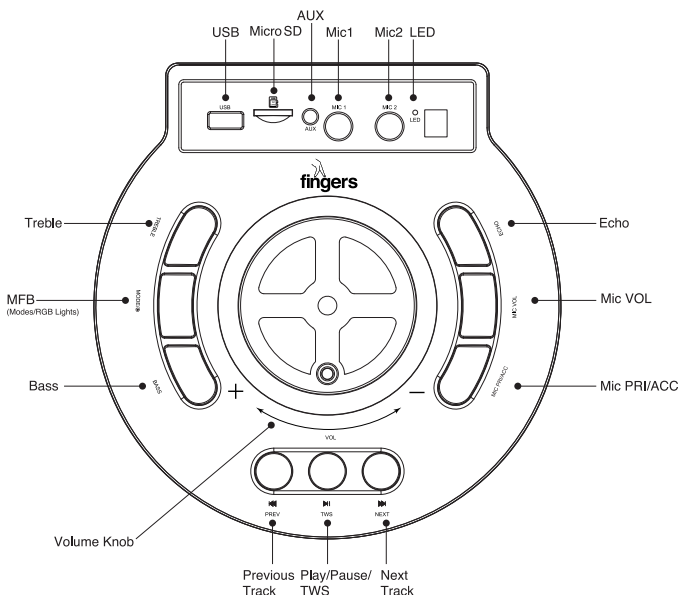

Function	What to do
Previous Track/ Previous FM Channel	Short Press to navigate previous tracks
Play/Pause/TWS	
Play/ Pause Music	Short Press to Play and Pause the music
TWS	Long Press to establish TWS connection between 2 speakers
Search/Save FM Channel	Long Press in the FM Mode
Next Track/ Next FM Channel	Short Press to navigate next tracks
Volume Control Knob	Rotate the knob to increase or decrease the volume
MIC PRI/ACC	Short Press to keep Mic in Primary Mode
	Long Press to switch to Acc (Accompaniment Mode) for vocal cut/Silence feature
MIC VOL	Short Press and adjust the volume by volume controller knob from 0-16
ECHO	Short Press and adjust the ECHO by volume controller knob from 0-16
BASS	Short Press and adjust the BASS by volume controller knob from 0-8
MFB	
Mode	Short Press to switch modes from BT/FM/USB/MicroSD/AUX
LED Mode Change	Long Press to change the RGB function
TREBLE	Short Press and adjust the TREBLE by volume controller knob from 0-8



 
Connections

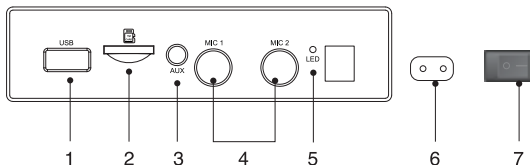

Connection	Function
1. USB interface	Insert a USB drive and then play
2. MicroSD card port	Insert the Micro-SD card and then play
3. AUX	Plug in an AUX cable
4. MIC Interface	For Wired/Wireless Mic connection
5. LED Indicator	For Charging Indication
6. Input Socket	To charge the speaker
7. On-Off Switch	For Power On/Off

B. Microphone (FINGERS Freedom Mic-39)

Function	Description
1. Power On/Off	Short Press to switch it on or off
2. Display On	The MIC is at working state

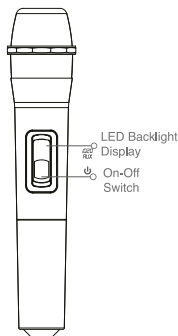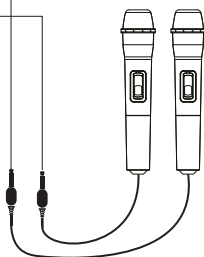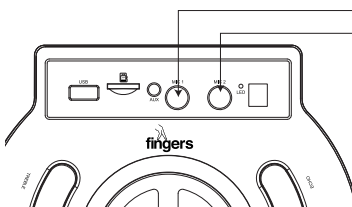   


a. For Wireless Microphone

- When the speaker and microphone are switched on at the same time, the wireless signal is automatically paired.
- At this time, the user can start using the microphone and can operate the buttons according to their own preferences.

b. For Wired Microphone

- Wired microphone is connected to Mic Port for Connection.
- At this time, the user can start using the microphone and can operate to their own preferences.

 IV. Charging the speaker

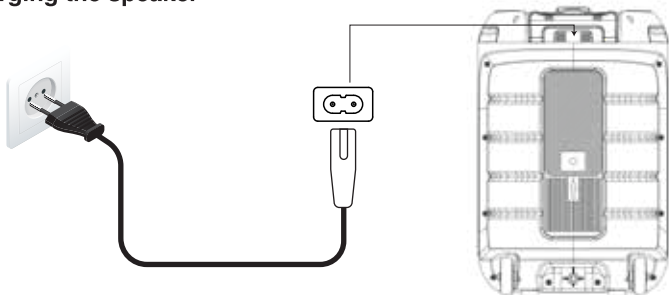

- Connect the Speaker with provided two-pin power cord.
- When on Charging, the LED indicator is in red.
- When fully charged, the LED indicator turns green.

 
V. Modes

You can enjoy your music in the following ways:


- i. Bluetooth
- ii. FM Radio
- iii. Micro SD
- iv. USB
- v. AUX

i. Bluetooth Mode

- When the device is switched on, it automatically goes to BT mode.
- If any source is connected (USB, MicroSD or AUX), press “MODE” till BT Mode is heard.
- Make sure that Bluetooth is enabled on your device. Find the device list and select “FINGERS RollingParties-51”. A Sound prompt of “Connected” is heard and it is ready to play.

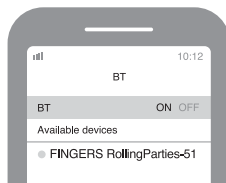

TWS Setting

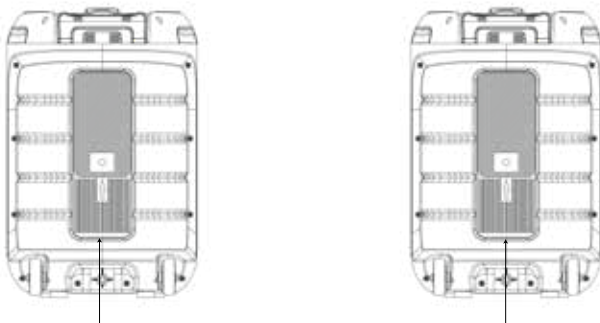 


1. To begin pairing, bring two FINGERS RollingParties-51 Speaker between proximity of each other and switch ON the power.
2. Long press TWS/play-pause switch of both the speaker to enable the TWS Mode. These two speakers will get automatically interconnected successfully.
3. Find the device list and select 'FINGERS RollingParties-51'. After successfully connection with one of the portable speakers, the second one automatically gets connected.

Note: TWS function can only be enabled to pair two FINGERS RollingParties-51 portable speaker in Bluetooth mode.

ii. FM Radio

- Press on the “MODE/⌂” Button till the voice prompt of the word “FM Mode” is heard.
- Long press “▶▶” to scan the stations automatically.
You can again press the same Button to stop the Scan
- Once the FM radio is tuned, you can long press “▶▶” and “◀◀” to select the desired FM Channel.
- Short press “▶▶” to mute the FM.

 
iii. Micro SD

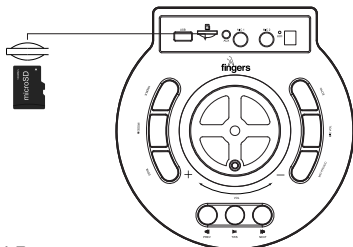


- Insert the Micro SD in provided Port.
- You can then play your favourite track directly from the MicroSD Card.

iv. USB

 - Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB.

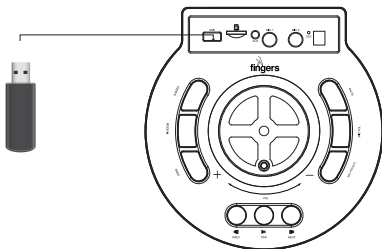

 
v. AUX

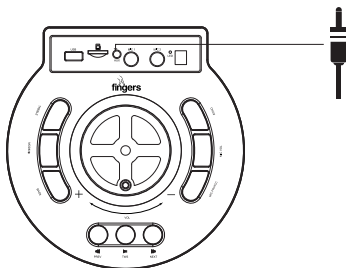

- Insert the AUX external audio cable and the audio system will automatically play back with priority and prompt tone.

VI. Remote Control

 1. On/Off: To switch On and Off the Speaker.
2. Mode: To navigate among different Modes of BT, USB, MicroSD,AUX and FM radio.
3. Stop: To stop the current playback.
4. Play/Pause: Single press to play and pause the playlist.
5. Mute: Short press to enable mute; press again to disable mute.
6. Vol+: Short press to increase the volume.
7. Next Track: Short press to change the next track.
8. Prev Track: Short press to change the previous track.
9. Vol-: Short press to decrease the volume.
10. RPT: To repeat the track in two ways in USB/MicroSD card mode in order of One-All
One: Repeats the current track.
All: Plays all songs repeatedly.
11. EQ: Short press to change the EQ modes.
12. 0 to 9: To select desired track/saved FM Channel in USB, MicroSD and FM Modes.

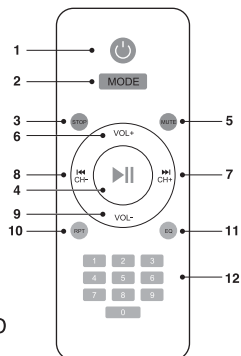

VII. Carrying your RollingParties-51 Speaker

The handle design allows you to move the speaker around easily.




Caution for carrying the speaker:

To prevent tipping, do not drag the speaker on uneven surfaces or slopes where stability is doubtful. If you sense any wobbling in the wheels, do stop or slow down.



VIII. Pole-Mounting RollingParties-51 Speaker

It can be mounted on a pole using the pole-mount stand (to be purchased separately). We recommend installation be carried out by qualified individuals adhering to safe rigging standards. The installer is responsible for proper selection and use of mounting hardware, to securely pole-mount the speaker.

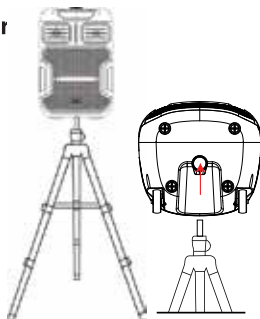

IX. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

X. Product Specifications

Parameters		RollingParties-51
Wireless Protocol		Bluetooth v5.3
Peak Output Power		40 W (Peak - 50 W)
Power Rating		220 - 240V, 50 Hz, 2 A
Driver unit		12" 4Ω, 40W + 10Ω 5 Wx1 (Treble)
Effective Range		Wireless range up to 10 m
Battery		4000 mAh SMF battery /12 V
Charging Time		Up to 5.5 hours
Playback Time		Up to 15 hours
Playback Options		Bluetooth® AUX USB MicroSD FM Radio Mic Port
Microphone	Mic Type	Wireless Mic (Mic name: FINGERS Freedom Mic-39)
	Connector Diameter	6.35 mm
	Polar Pattern	Uni-Directional V-Band (Mic Type: Moving coil)
	Power Source	2 x AA size batteries
	Battery Backup	Up to 10 hours
	Distance Support	15 - 25 m
Dimensions	Speaker: 345 (L) x 325 (W) x 520 (H) mm	
	Microphone: 258 (L) x 55 (W) x 55 (H) mm	
Weight	Speaker: 7.1 kg	
	Microphone: 216 g	
Colours		Rich Black

Battery Care Guidelines:

1. Recharge the speaker when the low battery voice prompt is heard.
2. For optimal battery health, charge for 10-12 hours.
3. Avoid using the speaker while it is charging.
4. If unused for over 3 months, charge once for up to 24 hours.

fingers.co.in | Ver.: 1.0.0

* Tested under ideal conditions and in BT playback mode, Playback time may vary depending on usage, playback mode and volume levels.

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners and protected under IPR. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in
• This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in



EPR Details