

fingers[®]



Quick Start Guide

SoundKing
Portable Speaker

I. Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

 
III. In the box

1 x FINGERS SoundKing Speaker
1 x USB-C Charging Cable
1 x AUX Cable

1 x Quick Start Guide
1 x Brand Note

IV. Connections


1. USB Port
2. AUX Port
3. LED Indicator
4. Type-C port (DC-5V) for charging
5. MicroSD Slot



Function	What to do
1. USB Port	Insert a USB drive, with priority for playback after insertion.
2. AUX Port	Insert AUX Cable to listen the music.
3. LED Indicator	When charging, the red light appears. And it disappears when fully charged. When Speaker is on, blue light blinks continuously.
4. Charging Port	For Charging.
5. MicroSD Port	Insert the Micro SD card, then play it.

V. On-board Controls

Previous Track/Volume Down | Mode | MFB (Multi-Function Button) | Next Track/Volume Up

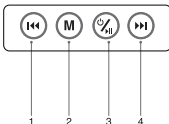

Function	What to do
1. Previous Track/Volume Down	
Previous Track/Previous FM Channel	Short Press
Volume Decrease	Long Press
2. Mode	
To navigate the modes of Bluetooth, FM, USB, Micro SD and AUX Modes	Short Press
(Note: USB/Micro SD /AUX modes can only be operational when corresponding device is inserted)	
3. Multi-Function	
To switch On and Off the speaker	Long Press
Play/Pause Music	Short Press
Manage Calls	
Receive Call	Short Press
End Call	Short Press again
Redial last called number	Double Press
4. Next Track/Volume Up	
Next Track/Next FM Channel	Short Press
Volume Increase	Long Press

VL Modes

You can enjoy your music in the following ways

i. Bluetooth ii. FM Radio iii. MicroSD iv. USB v. AUX

i. BT

1. When the device is switched on, it automatically goes to BT mode.
2. If any source is connected (USB, MicroSD), press "Ⓢ" till BT Mode is heard.
3. Make sure that Bluetooth is enabled on your device.
4. Find the device list and select "*FINGERS SoundKing*".
A sound prompt of "Connected" is heard and it is ready to play.



Connect 2 BT devices using Multi-Point Technology

- a) Turn off the BT function of first connected device, and search *FINGERS SoundKing* in 2nd device.
- b) Repeat the above steps to pair another device which was used to pair first device.,
- c) Switch off the *FINGERS SoundKing* Portable speaker, once 2nd device is connected successfully.
- d) Switch on the BT function on 1st device and *FINGERS SoundKing* portable speaker.
- e) As the speaker remembers previously connected devices - When switched on, it attempts to reconnect both previously paired devices.
- f) Now the speaker is ready to use, with both the paired devices.

ii. FM Radio

- Press on the "Ⓢ" Button till the voice prompt of the word "FM Mode" is heard.
- Single press "Ⓢ" to scan the stations automatically. You can press the same button again to stop the scan.
- Once FM radio is tuned, you can long press "Ⓢ" and "Ⓢ" to select the desired FM Channel.

iii. MicroSD

- Insert the MicroSD card in the provided Slot.
- You can then play your favourite tracks directly from the MicroSD Card.

iv. USB

- Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB.

v. AUX

- Insert the AUX external audio cable and the audio system will automatically play back with priority and prompt tone.

VII. Product Specifications

Parameters	SoundKing
Wireless Protocol	Bluetooth v5.3
Peak Output Power	5 W
Power Rating	DC 5V / 1A
Power Source	DC 5V / 1A
Driver unit	4Ω 5 W, Ø52 mm
Effective Range	Wireless range up to 10 m
Battery	1200 mAh
Charging Time	Up to 45 mins
Playback Time	Up to 12 hours
Playback Options	Bluetooth® FM Radio MicroSD USB AUX
Microphone	Built-in
Dimensions	100 x 67 x 82 mm (L x W x H)
Weight	291 g
Colours	Rich Black



fingers.co.in | Ver. 1.0.0

*Tested under ideal conditions and in BT playback mode. Playback time may vary depending on usage, playback mode and volume levels.

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice.

• All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011.

For proper disposal method, visit our website www.fingers.co.in



fingers