



Quick Start Guide

Eleganx 2.1
2.1 Multimedia Speaker

I. Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box

- 1 x FINGERS Eleganx 2.1 Sub-woofer
- 2 x FINGERS Eleganx 2.1 Satellites
- 1 x Remote Control
- 1 x Quick Start Guide
- 1 x Brand Note

III. On-board Controls




Function

Volume Up/Down

What to do

Rotate the knob to increase and decrease the Volume

IV. Connections

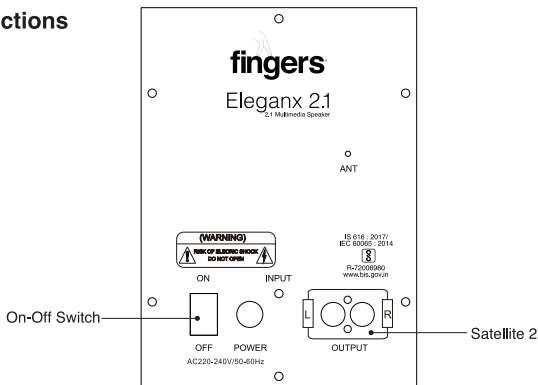

V. Modes

You can enjoy your music in the following modes:

i. Bluetooth ii. AUX iii. FM iv. USB

i. Bluetooth Mode

- Connect Power Cord Cable to Main Supply.
- Press the On/Off button of woofer, the voice prompt of the word “Bluetooth Mode” is heard.
- Make sure that Bluetooth is enabled on your device.
- Find the device list and select “FINGERS Eleganx 2.1”.
- A Sound prompt of “Connected” is heard and it is ready to play

ii. AUX Mode

- Press the Mode switch on Remote Control till Voice prompt of the word “AUX” is heard.
- Connect AUX audio cable to a laptop or mobile.
- It is now ready to play.


iii. FM Mode

- Press the Mode switch on Remote Control till Voice prompt of the word “FM” is heard.
- Press the Scan switch on Remote Control to scan the FM Channels.
- Short Press the Forward/Reverse switch on Remote Control to the next and previous channels in FM mode.
- It is now ready to play.

iv. USB Mode

- When the USB device is plugged in USB port, it directly plays the song via USB.
- It is now ready to play.

VI. Remote Control

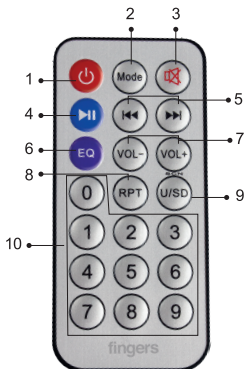

1. On-Off Switch: To switch between Stand-by & Operational Mode.
2. Mode: Short Press to switch between different Modes of BT, FM Radio, USB and AUX.
3. Mute: To enable or disable volume mute of the system.
4. Play/Pause Mode: To Play/Pause current track.
5. Forward/Reverse: Short Press to select Next Track/Previous Track.
6. EQ: Short Press to select desired equalizer.
7. VOL -/+ : Short Press to increase/decrease the volume level.
8. RPT: To repeat the track in USB mode.
9. USB/FM: Short press to go directly in USB Mode/FM Mode and can be used to scan the channels.
10. 0-9 Numeric Keys: To select desired track in USB mode and select Save FM Channel.

VII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

VIII. Product Specifications

Parameters	Eleganx 2.1
Wireless Protocol	Bluetooth v5.3
Total Peak Output	15 W RMS
Speaker Output Power	Sub-Woofer: 8 W Satellites: 2 x 3.5 W
Driver unit	Sub-Woofer: 6 Ω 8 W (4") Satellites: 2 x 4 Ω 3.5 W (2")
Interfaces	Output: 2 RCA sockets
Playback Options	Bluetooth® FM Radio USB AUX
Effective Range	Wireless range up to 10 m
Dimensions	Sub-Woofer: 142 (W) x 225 (D) x 210 (H) mm Satellites: 75 (W) x 80 (D) x 120 (H) mm
Weight	1.80 kg
Colours	Black