

Quick Start Guide

Macho-MK1

Wired Mechanical Keyboard



I. Important - Warnings and Safety

1. Do not place the keyboard & mouse near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Keep it dry. Do not allow the keyboard/mouse to get wet or expose to moisture/rain, else it increases the occurrences of fire or shock.
3. Use only those accessories supplied by FINGERS.
4. Refer all servicing to qualified personnel. Servicing is required when the keyboard has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

Choking Hazard

This device may contain small parts which may be a choking hazard to children under 3. Keep small parts away from children.

II. In the box


- 1 x FINGERS Macho-MK1
- 1 x Type-C Cable for interface
- 1 x Keycap Puller
- 1 x Quick Start Guide
- 1 x Brand Note

III. On-board Controls



IV. Getting Started

- Turn on your PC or laptop.
- Connect the USB Type-C interface cable to the keyboard
- Plug the USB connector of the keyboard into a USB port on your PC or laptop. That's it, your keyboard is ready to use!

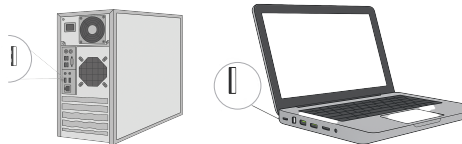

V. Keyboard Features

1. Adjust Backlights

Key Combination	Function	Description
FN + ↑	Brightness +	To Increase the backlight brightness. There are 3 levels ,When the brightness reaches maximum,the indicator LED flashes once.
FN + ↓	Brightness -	To decrease the backlight brightness. There are 3 levels, and the 4th level is Off. When the keyboard reaches Off, the indicator LED blinks once.
FN + ⇐	Speed -	Decreases the backlight animation speed (4 levels, default: highest Speed). When the speed reaches minimum, the indicator LED flashes once.
FN + ⇒	Speed +	Increases the backlight animation speed (4 levels). When the speed reaches maximum, the indicator LED flashes once.
FN + SCRLK	Turn off Backlights	Turns off the keyboard's backlights
FN +ESC	Restore Backlight	Restores the backlight to factory default settings
FN + L	Knob Backlight Mode	Switch between Always On, Breathing, and Off modes

2. Using Knob

- By default, it is in multimedia mode.

▶ Press: Mute / Unmute

✳️ Rotate: Adjust Volume

- To switch to backlight mode, press & hold the knob for 3 seconds.

- The indicator LED will flash once, indicating the mode has changed.

✳️ Press: Switch Backlight Mode

✳️ Rotate: Adjust Brightness

➤ FN + Combination keys:

Default Function Settings

Key Combination	Function
FN + F1	Music
FN + F2	Volume -
FN + F3	Volume +
FN + F4	Mute
FN + F5	Stop
FN + F6	Previous Track

Key Combination	Function
FN + F7	Play / Pause
FN + F8	Next Track
FN + F9	Mailbox
FN + F10	Homepage
FN + F11	My computer
FN + F12	Calculator

Other Functions

Key Combination	Function	Description
FN + WIN	Lock / Unlock WIN	Enables or disables the Windows key
FN + W	Direction Key Exchange	Swaps W, A, S, D keys with Arrow keys

VI. Care and Maintenance

1. Use a soft, damp cloth (water only) to clean the surface.
2. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
3. Do not allow any liquid to enter into any of the openings.

VII. Specifications

Parameters	Macho-MK1
Connectivity	Wired
No. of keys	104 keys + 1 Knob
Interface	Type-C USB
Media Keys	15
Switch	Red Linear Switch
Switch Life	50 million life cycles
Switch Travel Distance	4.0 ± 0.5 mm
Actuation Force	60 gf ± 10 gf
System Requirements	Microsoft® Windows® macOS
Cable Length	1.5 m
Cable Type	Detachable Type-C PVC Cable
Dimensions	441.5 (L) x 135 (W) x 38(H) mm
Weight	714 g

fingers.co.in | Ver.: 1.0.0



• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in