

Quick Start Guide

Savage-MK2

Wired Mechanical Keyboard



I. Important - Warnings and Safety

1. Do not place the keyboard near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Keep it dry. Do not allow the keyboard/mouse to get wet or expose to moisture/rain, else it increases the occurrences of fire or shock.
3. Use only those accessories supplied by FINGERS.
4. Refer all servicing to qualified personnel. Servicing is required when the keyboard has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.


Choking Hazard

This device may contain small parts which may be a choking hazard to children under 3. Keep small parts away from children.

II. In the box


- 1 x FINGERS Savage-MK2 (Wired Mechanical Keyboard)
- 1 x Type-C Cable for interface
- 1 x Switch and Keycap Puller
- 1 x Quick Start Guide
- 1 x Brand Note

III. On-board Controls

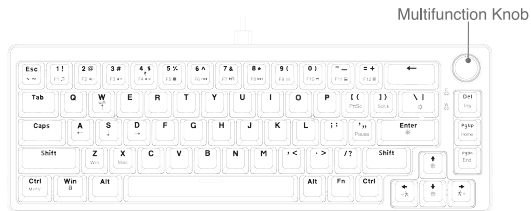

IV. Getting Started

 - Turn on your PC or laptop.
 - Connect the USB Type-C interface cable to the keyboard
 - Plug the USB connector of the keyboard into a USB port on your PC or laptop.
- That's it, your keyboard is ready to use!



V. Keyboard Features

1. Adjust Backlights

Key Combination	Function	Description
FN + ↑	Brightness +	Increase the backlight brightness. There are 4 levels. When the brightness reaches maximum, the indicator LED flashes once.
FN + ↓	Brightness -	Decrease the backlight brightness. There are 3 levels, and the 4 th level is Off. When the brightness reaches minimum, the indicator LED flashes once.
FN + ⇐	Speed -	Decreases the backlight animation speed (4 levels, default: 2 nd). When the speed reaches minimum, the indicator LED flashes once.
FN + ⇒	Speed +	Increases the backlight animation speed (4 levels). When the speed reaches maximum, the indicator LED flashes once.
FN + \	Backlight Modes	For Backlight Mode with 11 Backlights effects
FN + Enter	Turn On-Off Backlights	Turns On-Off backlights

2. Using Knob

- By default, it is in multimedia mode.
 - ▶ Press: Mute / Unmute
 - ✳ Rotate: Adjust Volume
- To switch to backlight mode, press & hold the knob for 3 seconds.
- The indicator LED will flash once, indicating the mode has changed.
 - ✳ Press: Switch Backlight Mode
 - ✳ Rotate: Adjust Brightness

➤ FN + Combination keys:

Default Function Settings

Key Combination	Function
FN + ESC	~
FN + 1	F1
FN + 2	F2
FN + 3	F3
FN + 4	F4
FN + 5	F5
FN + 6	F6
FN + 7	F7
FN + 8	F8
FN + 9	F9
FN + 0	F10
FN + _ (underscore)	F11
FN + =	F12
FN + Backspace	Delete

Function Exchange Mode

Key Combination	Function
FN + Left Ctrl	Function Exchange

Multimedia functions settings

Key Combination	Function
FN + `~	ESC
FN + 1	Multimedia Mode
FN + 2	Volume Down
FN + 3	Volume Up
FN + 4	Mute
FN + 5	Pause
FN + 6	Previous Track
FN + 7	Play / Pause
FN + 8	Next Track
FN + 9	Mailbox
FN + 0	Homepage
FN + _ (underscore)	My Computer
FN + =	Calculator

System and Function settings

Key Combination	Function	Description
FN + [{	Print Screen (PRTSC)	
FN +]}	Scroll Lock (SCRLK)	
FN + '	Pause	
FN + Del	Insert (INS)	
FN + Page Up	Home	
FN + Page Dn	End	
FN + Space	Restore	Long press 3–6 seconds to restore the keyboard to factory settings. The backlight flashes once to confirm.

Other Functions

Key Combination	Function	Description
FN + W	Direction Key Exchange	Switches the W, A, S, D keys with arrow keys.

Keyboard Layout change

Key Combination	Function	Description
FN + Z	Change Layout	Switch Windows® Keyboard layout
FN + X	Change Layout	Switch macOS Keyboard layout

VI. Care and Maintenance

1. Use a soft, damp cloth (water only) to clean the surface.
2. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
3. Do not allow any liquid to enter into any of the openings.

VII. Specifications

Parameters

Connectivity
No. of keys
Interface
Switch
Switch Life
Switch Travel Distance
Actuation Force
System Requirements
Cable Length
Cable Type
Dimensions
Weight

Savage-MK2

Wired
67 keys + 1 Knob
Type-C USB
Hot-Swappable Clicky Switch
50 million life cycles
3.6 - 4.0 mm
50 gf
Microsoft® Windows® | macOS | Linux
1.5 m
Detachable Type-C PVC Cable
328 (L) x 114 (W) x 34 (H) mm
528 g

fingers.co.in | Ver.: 1.0.0



• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in