

**fingers<sup>®</sup>**



# **Quick Start Guide**

**ChillRay**  
Wireless Headphone

## **I. Important - Warnings & Safety Instructions**

1. While placing the headphone in your ears, please keep the volume down and then gradually adjust the volume to an appropriate, comfortable level.
2. Prolonged use at high volumes might damage your hearing.
3. Focus on your safety and of others. We recommend not to listen music while riding or driving, or at any time when the inability to hear surrounding sounds may present a danger to yourself or others.
4. If you experience a warm sensation or loss of audio, do remove and disconnect immediately.
5. Do not place the headphone near heat sources such as fire, radiators, stoves, light candles and other apparatus that produces heat.
6. Use only those accessories supplied by FINGERS.
7. Unplug the headphone once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
8. It is recommended to refer all servicing to qualified personnel. Servicing is required when the device has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

## **II. In the box**

- 1 x FINGERS ChillRay
- 1 x USB Type-C Charging Cable
- 1 x Detachable Mic
- 1 x Aux Cable
- 1 x Quick Start Guide
- 1 x Brand Note

### III. On-board Controls

| Button                                                                            | Function                             | What to do         |
|-----------------------------------------------------------------------------------|--------------------------------------|--------------------|
|  | <b>1.Multi-Function (MFB)</b>        |                    |
|                                                                                   | On-Off                               | Long Press         |
|                                                                                   | Play/Pause                           | Short Press        |
|                                                                                   | RGB Light Mode                       | Double Press       |
|                                                                                   | Voice Assistance                     | Triple Press       |
|                                                                                   | Game Mode/Music                      | Press Four times   |
|                                                                                   |                                      |                    |
|                                                                                   | <b>During Calls</b>                  |                    |
|                                                                                   | Receive Call                         | Short Press        |
|                                                                                   | End Call                             | Again, Short Press |
|                                                                                   | Reject incoming call                 | Long Press         |
|  | <b>2. Volume Up/Next Track</b>       |                    |
|                                                                                   | Increase Volume                      | Short Press        |
|                                                                                   | Next Track                           | Long Press         |
|  | <b>3. Volume Down/Previous Track</b> |                    |
|                                                                                   | Decrease Volume                      | Short Press        |
|                                                                                   | Previous Track                       | Long Press         |

### IV. Charging

- A red light indicates that the device is in charging mode.
- Once fully charged, the LED light will turn off.

## V. Enjoy music in following ways

### i. Bluetooth®

- Long Press the “MFB button A smartphone screen displaying the Bluetooth settings. At the top, the status bar shows signal strength, the text 'BT', and the time '10:12'. Below the status bar, there is a section titled 'BT' with a toggle switch set to 'ON'. Underneath, there is a section titled 'Available devices' with a single entry: 'FINGERS ChillRay' with a small circular icon to its left.

- As it flashes red and blue alternately, make sure that Bluetooth® is enabled on your device. Find the device list and select “FINGERS ChillRay”.
- The indicator flashes in white, a sound connected is heard and it is ready to play.
- Repeat above steps to pair another device.

### ii. AUX

- Use the provided special 3.5 mm to Type-C cable. Connect the 3.5 mm jack to your PC or mobile device, and the Type-C connector to the ChillRay’s charging port.

## VI. External Mic.

- Insert the provided external detachable microphone into the provided Mic port for improved microphone performance.



## VII. Product Specifications

| Parameters                | ChillRay                                            |
|---------------------------|-----------------------------------------------------|
| Wireless Protocol         | Bluetooth® v6.0                                     |
| Driver unit               | Φ 40 mm                                             |
| Effective Frequency Range | 2.402 GHz ~ 2.480 GHz                               |
| Effective Range           | Up to 10 meters                                     |
| Battery                   | 400mAh (3.7V)                                       |
| Charging Time             | Around 3 hours                                      |
| Playback Time*            | Up to 10 hours (LED ON)<br>Up to 20 hours (LED OFF) |
| Talktime*                 | Up to 20 hours                                      |
| Standby Time              | Up to 200 hours                                     |
| Playback Options          | Bluetooth®   AUX                                    |
| Dimensions                | 185 (L) x 85 (W) x 190 (H) mm                       |
| Weight                    | 184 g                                               |

## VIII. Care and Maintenance

1. Switch off the device before cleaning it.
2. Use soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.



fingers.co.in

Ver.:1.0.0

\*Tested under ideal conditions and in BT playback mode. Playback time may vary depending on usage, playback mode and volume levels.

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on [www.fingers.co.in](http://www.fingers.co.in) • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website [www.fingers.co.in](http://www.fingers.co.in)