

# fingers<sup>®</sup>



## Quick Start Guide

RollingParties-110N  
Multimedia Speaker

## I. Important - Warnings and Safety


1. Do not place the speaker & Mics near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker/Mic once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

## II. In the box

|                                                 |                        |
|-------------------------------------------------|------------------------|
| 1 x FINGERS RollingParties-110N Speaker         | 4 x AA Battery for Mic |
| 2 x FINGERS Freedom Mic-39 Wireless Microphones | 2 x AAA Battery        |
| 1 x Audio Cable                                 | for Remote Control     |
| 1 x Power Adapter                               | 1 x Quick Start Guide  |
| 1 x Remote Control                              | 1 x Brand Note         |

## III. On-board Controls



### A. Speaker

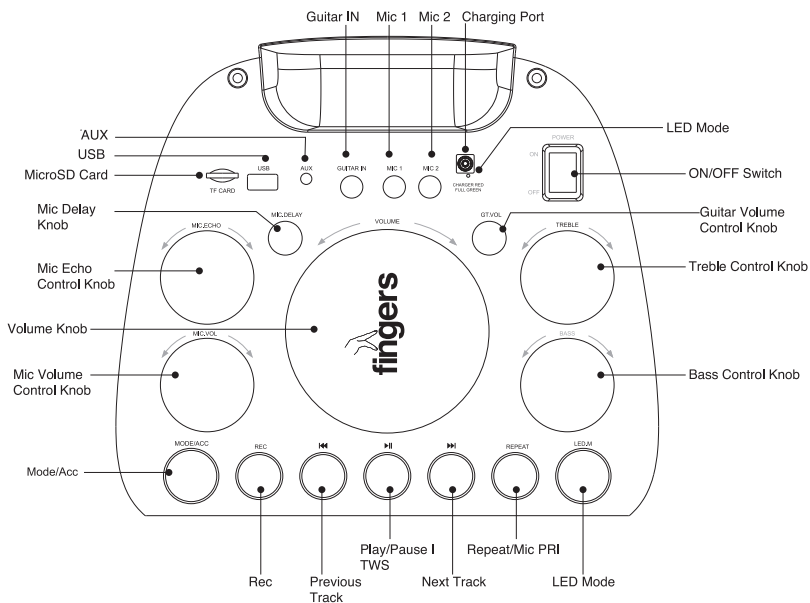

| <b>Function</b>                       | <b>What to do</b>                                                                                                                          |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Volume Knob</b>                    | Rotate the knob to increase or decrease the volume                                                                                         |
| <b>Mode/ ACC</b>                      | Short Press to switch modes from BT/FM/ USB/MicroSD/AUX<br>Long Press to switch ACC (Accompaniment mode)<br>for vocal cut/ silence feature |
| <b>REC</b>                            | To Record the Mic Voice<br>Note: It will only record when USB inserted in the speaker                                                      |
| <b>Previous Track</b>                 | Short Press to navigate previous tracks                                                                                                    |
| <b>Play/Pause I TWS</b>               |                                                                                                                                            |
| Play/Pause Music                      | Short Press to Play and Pause the music                                                                                                    |
| TWS                                   | Long Press to establish TWS connection between 2 speakers                                                                                  |
| Search/Save<br>FM Channel             | Long Press in the FM Mode                                                                                                                  |
| <b>Next Track</b>                     | Short Press to navigate next tracks                                                                                                        |
| <b>Repeat/Mic PRI</b>                 |                                                                                                                                            |
| Repeat                                | Single press to repeat the song in USB and Micro SD mode<br>One - To repeat single song<br>All - To repeat the all songs                   |
| Mic PRI                               | Long Press to keep in Mic Primary Mode                                                                                                     |
| <b>LED M.</b>                         | Short Press to change the RGB Light modes                                                                                                  |
| <b>On-Off Switch</b>                  | To power on and off the speaker                                                                                                            |
| <b>Treble<br/>Control Knob</b>        | Rotate the knob to increase or decrease the Treble level                                                                                   |
| <b>Bass<br/>Control Knob</b>          | Rotate the knob to increase or decrease the Bass level                                                                                     |
| <b>Mic Volume<br/>Control Knob</b>    | Rotate the knob to increase or decrease the Mic Volume level                                                                               |
| <b>Mic Echo<br/>Control Knob</b>      | Rotate the knob to adjust the MIC Echo function                                                                                            |
| <b>Mic. Delay Knob</b>                | Rotate the knob to adjust Mic delay                                                                                                        |
| <b>Guitar Volume<br/>Control Knob</b> | Rotate the knob to increase or decrease the<br>Guitar Volume level                                                                         |

## B. Microphone (FINGERS Freedom Mic-39)
  
| Function        | Description                        |
|-----------------|------------------------------------|
| 1. Power On/Off | Short Press to switch it on or off |
| 2. Display On   | The MIC is at working state        |

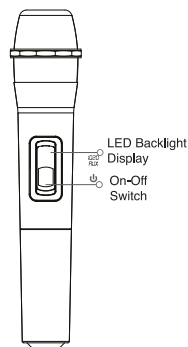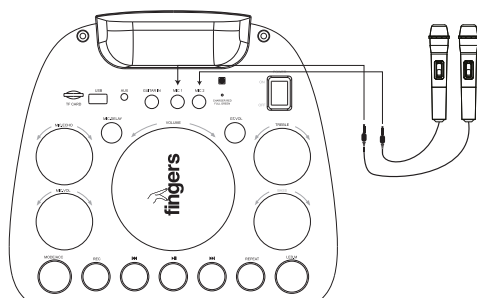


### a. For Wireless Microphone

- When the speaker and microphone are switched on at the same time, the wireless signal is automatically paired.
- At this time, the user can start using the microphone and can operate the buttons according to their own preferences.

### b. For Wired Microphone

- Wired microphone is connected to Mic Port for Connection.
- At this time, the user can start using the microphone and can operate to their own preferences.

 
## IV. Connections

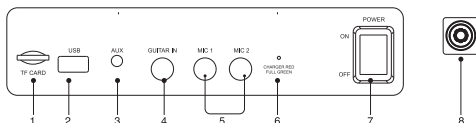

| Connection           | Function                                                                               |
|----------------------|----------------------------------------------------------------------------------------|
| 1. MicroSD card port | Insert the Micro-SD card and then play.                                                |
| 2. USB interface     | Insert a USB drive and then play.                                                      |
| 3. AUX               | Plug in an AUX cable                                                                   |
| 4. Guitar Input      | For Input connection of Guitar                                                         |
| 5. MIC Interface     | For Wired/Wireless Mic connection                                                      |
| 6. LED Indicator     | When charging, the red light is on.<br>While the light goes green, when fully charged. |
| 7. On-Off Switch     | For Power On/Off                                                                       |
| 8. Charging Port     | Connect the power adapter plug to the Charging port.                                   |

## V. Guitar Connection

 Connect the Guitar to the Guitar input socket

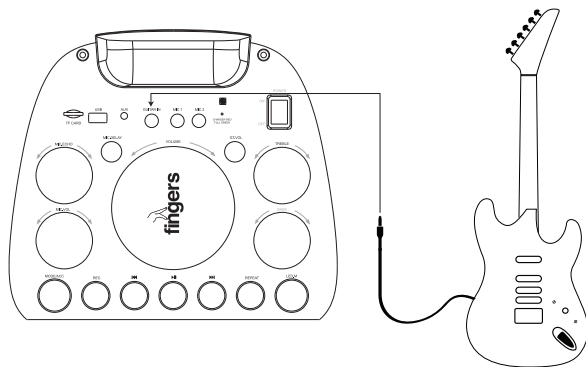

## VI. Charging the speaker

- Connect the power adapter plug to the Charging port, and then connect the adapter to a power outlet.
- When on Charging, the LED indicator is in red.
- When fully charged, the LED indicator turns green.

 
## VII. Modes

You can enjoy your music in the following ways:


- BT
- FM Radio
- Micro SD
- USB
- AUX

### i. BT Mode

- When the device is switched on, it automatically goes to BT mode.
- If any source is connected (USB, MicroSD or AUX), press "MODE" till BT Mode is heard.
- Make sure that Bluetooth is enabled on your device. Find the device list and select "FINGERS RollingParties-110N". A Sound prompt of "Connected" is heard and it is ready to play.

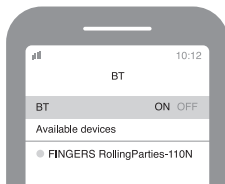

## TWS Setting

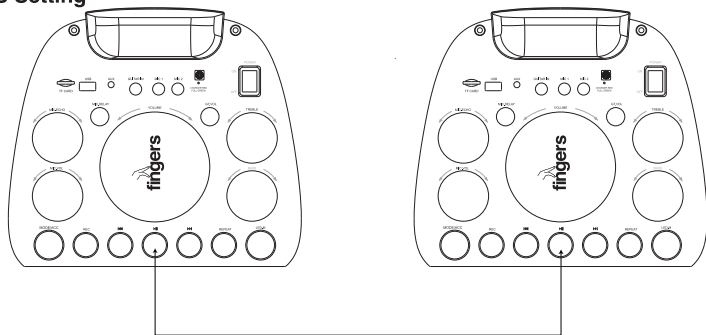 


1. To begin pairing, bring two **FINGERS RollingParties-110N** Speaker between proximity of each other and switch ON the power.
2. Long press play-pause switch of both the speaker to enable the TWS Mode. These two speakers will get automatically interconnected successfully.
3. Find the device list and select **FINGERS RollingParties-110N**. After successfully connection with one of the portable speakers, the second one automatically gets connected.

*Note: TWS function can only be enabled to pair two **FINGERS RollingParties-110N** portable speaker in Bluetooth mode.*

## ii. FM Radio

 - Press on the “Mode/ACC” Button till the voice prompt of the word “FM Mode” is heard.
- Long press “▶|” to scan the stations automatically.  
You can again press the same Button to stop the Scan
- Once the FM radio is tuned, you can long press “▶▶” and “◀◀” to select the desired FM Channel.
- Short press “▶|” to mute the FM.


## iii. Micro SD

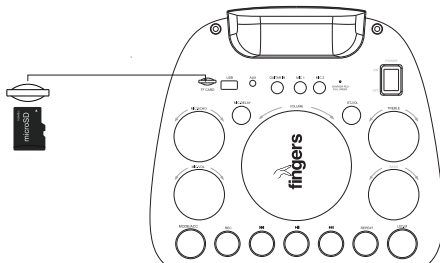


- Insert the Micro SD in provided Port.
- You can then play your favourite track directly from the MicroSD Card.

#### iv. USB

 - Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB.

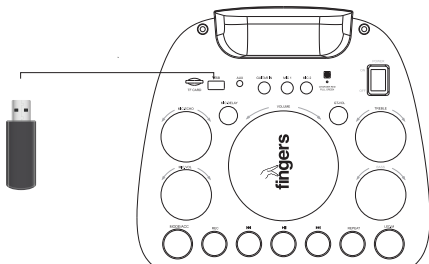


#### v. AUX

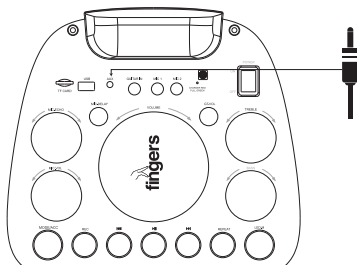 

- Insert the AUX external audio cable and the audio system will automatically play back with priority and prompt tone.

### VIII. Remote Control

 1. On/Off: To switch On and Off the Speaker.
2. Mode: To navigate among different Modes of BT, USB, MicroSD, AUX and FM radio.
3. Stop: To stop the current playback.
4. Play/Pause: Single press to play and pause the playlist.
5. Mute: Short press to enable mute; press again to disable mute.
6. Vol+: Short press to increase the volume.
7. Next Track: Short press to change the next track.
8. Prev Track: Short press to change the previous track.
9. Vol-: Short press to decrease the volume.
10. RPT: To repeat the track in two ways in USB/MicroSD card mode in order of One-All One: Repeats the current track. All: Plays all songs repeatedly.
11. EQ: Short press to change the EQ modes.
12. 0 to 9: To select desired track/saved FM Channel in USB, MicroSD and FM Modes.

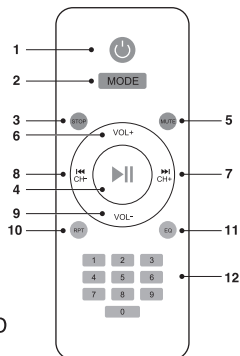

IX. Care and Maintenance

- 1. Switch off the speaker before cleaning it.
- 2. Use a soft cloth to clean the surface.
- 3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
- 4. Do not allow any liquid to enter into any of the openings.

X. Product Specifications

| Parameters        |                    | RollingParties-110N                                                                 |
|-------------------|--------------------|-------------------------------------------------------------------------------------|
| Wireless Protocol |                    | BT v5.3                                                                             |
| Peak Output Power |                    | 80 W (Peak -110 W)                                                                  |
| Power Rating      |                    | DC 15V == 2A                                                                        |
| Driver unit       |                    | 4 Ω 30 W, 10" x 2 + 10 Ω 20 W x 1                                                   |
| Effective Range   |                    | Wireless range up to 10 m                                                           |
| Battery           |                    | 4000 mAh                                                                            |
| Charging Time     |                    | Up to 6.5 hours                                                                     |
| Playback Time*    |                    | Up to 8 hours                                                                       |
| Playback Options  |                    | BT   AUX   USB   MicroSD   'FM Radio   Mic Port   Guitar Input                      |
| Microphone        | Mic Type           | Wireless Mic (Mic name: FINGERS Freedom Mic-39)                                     |
|                   | Connector Diameter | 6.35 mm                                                                             |
|                   | Polar Pattern      | Uni-Directional V-Band (Mic Type: Moving coil)                                      |
|                   | Power Source       | 2 x AA size batteries                                                               |
|                   | Battery Backup     | Up to 10 hours                                                                      |
|                   | Distance Support   | 15 - 25 m                                                                           |
| Dimensions        |                    | Speaker: 360 (L) x 335 (W) x 845 (H) mm<br>Microphone: 258 (L) x 55 (W) x 55 (H) mm |
| Weight            |                    | Speaker: 11.7 kg<br>Microphone: 216 g                                               |
| Colours           |                    | Rich Black                                                                          |

Battery Care Guidelines:

- 1. Recharge the speaker when the low battery voice prompt is heard.
- 2. For optimal battery health, charge for 10-12 hours.
- 3. Avoid using the speaker while it is charging.
- 4. If unused for over 3 months, charge once for up to 24 hours.

fingers.co.in | Ver.: 1.0.0



\*Tested under ideal conditions and in BT playback mode, Playback time may vary depending on usage, playback mode and volume levels.  
\*FM radio functionality depends on local network conditions & may vary by area, For better reception, we recommend connecting an external USB cable, which can act as an antenna & improve signal strength.  
• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners and protected under IPR. • Product warranty is governed by warranty terms mentioned on [www.fingers.co.in](http://www.fingers.co.in) • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website [www.fingers.co.in](http://www.fingers.co.in)