

fingers[®]



Quick Start Guide

RoomFilling-352
Speaker System/Speaker

 
I. Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the power cord of the speaker when unused for long periods or during lightning/thunderstorms.
4. Do place the speakers on a stable surface and keep them out of reach from children.
5. To avoid any shock hazards, we recommend not removing the cover, dismantle the unit or even insert any object in the unit.
6. It is recommended to refer all servicing to qualified personnel only. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box

- 1 x FINGERS RoomFilling-352
- 1 x FINGERS RoomFilling-352 (Sub-woofer)
- 1 x Remote Control
- 1 x Power Adapter
- 1 x AUX Cable
- 1 x Optical Cable
- 1 x Quick Start Guide
- 1 x Brand Note

III. On-board Controls

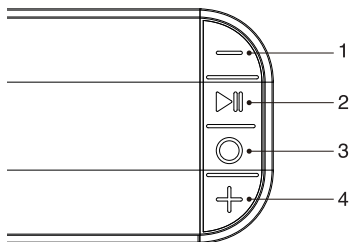


1. Long press for Volume down | Short press for Previous track
2. Short press for Play / Pause
3. Short press for Change mode | Long press for Power On-Off
4. Long press for Volume up | Short press for Next track

LED Display

Displays details of Mode inputs, Equalizer, Volume levels, tracks and much more. When displayed as below -

1. BT: In BT mode
2. USB: In USB mode
3. Line: Auxiliary input mode
4. OPT: Optical mode
5. COA: Coaxial mode
6. HD Interface mode

 IV. Connection

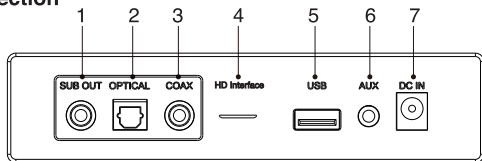


1. Sub Out: Subwoofer output interface
2. Optical In: To connect compatible devices using an optical cable
3. COAX In: To connect compatible devices using a coaxial cable
4. HD Interface: To connect compatible devices using an HD cable
5. USB IN: To insert a flash drive/USB Pendrive for direct MP3/WAV playback
6. AUX In: To connect compatible devices using the 3.5 mm stereo jack
7. DC IN: To connect the provided Power adaptor


Note: To prevent malfunction and/or damage to speakers or other devices, we recommend always turning the volume down and switching OFF all the power devices, before making any connections.

V. Connect the Sound Bar

 
A. Power your system



 
- i. Plug the power Adaptor of Sound Bar Socket



 - ii. Connect the Sub-woofer to the Sound Bar



 
- iii. Insert AAA Batteries into the remote

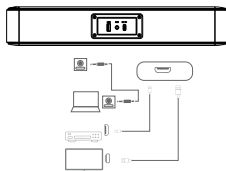

- iv. Connect to other devices


B. Placement

 Place on table/flat space.

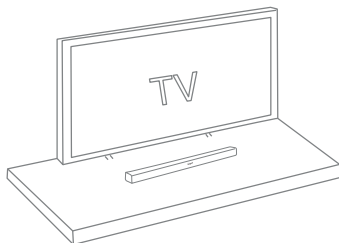

VI. Remote Control

 1. Power Button: Short press to Power/Off
2. Tre- : Short press to decrease the music treble
3. Tre+ : Short press to increases the music treble
4. Volume+ : Short press to increase the volume
5. Previous (PREV): In BT or USB mode, short press to play the previous track
6. Next: In BT or USB mode, short press to play the next track
7. Play / Pause:
 - In BT or USB mode, short press to play or pause music.
 - In AUX, ARC, and OPTICAL modes, it works as a Mute.
8. Volume - : Short press to decrease the volume
9. Reset: Short press to reset the volume and music EQ settings.
10. Mute: Short press to mute the audio during playback
11. EQ: Short press to switch between multiple sound effect (EQ) modes
12. Bass - : Short press to decrease the bass level
13. Bass + : Short press to increase the bass level.
14. Input: Short press to switch between input modes of BT / USB / AUX / HD Interface / OPTICAL.

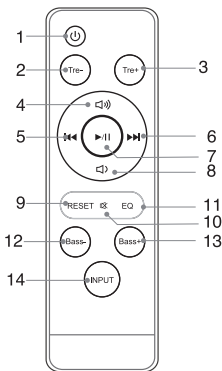

VII. Modes

You can enjoy your music in the following ways

i.BT ii.Optical iii.Coaxial iv.HD Interface v.USB vi. AUX

i. BT

- Press on the mode button till the voice prompt of the word “BT mode” is heard.
- The LED screen highlights “BT” signifying that it is ready to pair a device.
- Make sure that BT is enabled on your device.
- Find the device list and select FINGERS RoomFilling-352.
- A sound prompt of “connected” is heard and it is ready to play.



ii. Optical

- If you wish to listen to music from TV or other devices with Optical out, plug in the Optical cable in the Optical port.
- Press the mode button till the voice prompt of the word “Optical mode” is heard.
- You can then stream music directly from your devices.

iii.Coaxial

- If you wish to listen to music from TV or other devices with Coaxial out, plug in the Coaxial cable in the Coaxial port.
- Press the mode button till the voice prompt of the word “Coaxial mode” is heard.
- You can then stream music directly from your devices.

iv. HD Interface

- If you wish to listen to music from TV or other devices plug in the Monitor Cable to HD Interface Port
- Press the "Mode symbol" button till the voice prompt is heard,
- You can then stream music direct from your TV.

v. USB

- Insert the USB device (Pen Drive) in the provided port.
- Press the mode button till the voice prompt of the word “USB mode” is heard.
- You can then play your favourite tracks directly from the USB port.

vi. AUX

- If you wish to listen to music from mobile devices, plug in the AUX cable in the AUX port.
- Press the mode button till the voice prompt of the word “AUX mode” is heard.
- You can then stream music directly from your mobile devices.

VIII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

IX. Specifications

Parameters

Wireless Protocol
Total Output Power
Output Power

Driver unit

Playback Options

BT Frequency Range

Effective Range

Dimensions

Weight

RoomFilling-352

BT 5.4 EDR
60 W
Bar: 15W x 2 = 30
Sub-Woofer: 30W
Bar: 2.25" x 2
Sub-Woofer: 4" x 1
BT | USB | AUX | Optical |
HD Interface | Coaxial
2.402 GHz ~ 2.480 GHz
Up to 10 m
Sound Bar: 400 (L) x 72 (W) x 70 (H) mm
Sub-Woofer: 186 (L) x 186 (W) x 250 (H) mm
Sound Bar: 800 g
Sub-Woofer: 1.6 kg



EPR Details

Ver.: 1.0.0 | fingers.co.in

Stay connected with us



@fingers.co.in



@FingersIndia



@FingersIndia

Customer Service

- Support email: customer.care@fingers.co.in
- +91 74004 88454: Mon - Fri (9.30 am to 6.30 pm)

For further information, please visit www.fingers.co.in

*When connected via BT Mode - you can move around and play music within a wireless range of up to 10 m, with audio fidelity keeping stable and intact throughout.

• Images shown may vary from actual product.

• Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in

