

® fingers



Quick Start Guide

SoulSound-64
Multimedia Speaker

 
I. Important - Warnings and Safety

1. Do not place the speaker & Mics near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker/Mic once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box

- | | |
|------------------------------|----------------------------------|
| 1 x FINGERS SoulSound-64 | 2 x Rechargeable Battery for Mic |
| 2 x FINGERS Freedom Mic-U104 | 2 x AAA Battery for Remote |
| 1 x AUX Cable | 1 x Quick Start Guide |
| 1 x Type-C Cable | |
| 1 x Remote Control | |


III. Connections

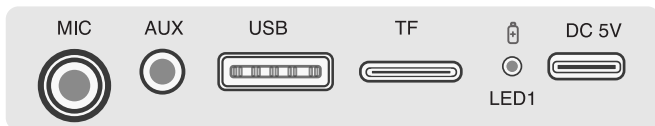

Connection	Function
Type-C charging port	Connect a Type-C cable to charge the speaker.
LED Indicator	Indicates the charging status of the speaker.
TF/MicroSD slot	Insert a MicroSD card to play music files
USB port	Insert a USB drive to play music files.
AUX	To connect external audio devices through an AUX cable.
Mic Port	Connect a wired microphone/microphone receiver.


IV. On-board Controls

 A. Speaker

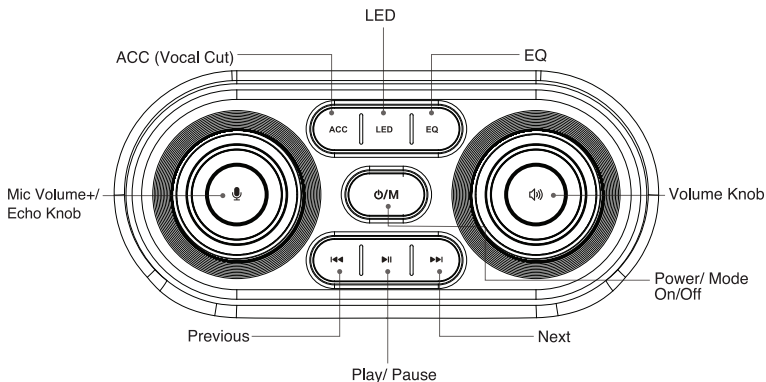

Function	What to do
Power On-off	Long press to turn the speaker ON/OFF.
Switch I Mode	Short press to change the mode.
Prev. Button	To play the previous track.
Play/Pause Button	To play or pause the music.
Next Button	To play the next track.
ACC (Vocal Cut) Button	Short press to reduce or remove vocals from the playing track.
EQ Button	To change the sound equalizer modes.
LED Button	To change or control the LED light effects.
Volume Knob	Rotate to increase or decrease the speaker volume.
Mic Volume + Echo Knob	Rotate to increase or decrease the microphone volume. Press once and rotate to increase or decrease the echo effect level.

 B. Microphone (FINGERS Freedom Mic-U104)

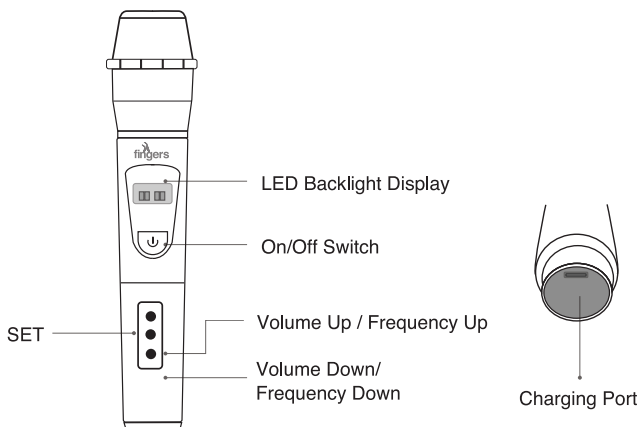

Note: Open the Cover at bottom of the mic to set the desired frequency and volume as shown in below image.

Function	Description
Power On-Off	Short Press: Power On Long Press: Power Off
Display On	The MIC is at working state
SET	To set Frequency and Volume of Mic
Frequency Up/Volume Up	When SET is at Volume - Increase the Volume When SET is at Frequency - Increase the Frequency channel
Frequency Down/Volume Down	When SET is at Volume - Decrease the Volume When SET is at Frequency - Decrease the Frequency channel

Microphone Connection

When the speaker and the bundled wireless microphone are switched on, they automatically pair with each other. After successful pairing, the microphone is ready to use.

To connect an additional microphone, plug a wired microphone into the MIC port or insert the receiver of a wireless microphone into the MIC port on the speaker. The microphone will then be ready for use.

V. Charging

i. Speaker

- Connect a Type-C cable to the Type-C port on the speaker to charge it.
- When on Charging, the LED indicator is red.
- When fully charged, the LED indicator turns off.

ii. Microphone

- Connect a Type-C cable to the Type-C port to charge the microphone.
- A charging icon/animation appears on the microphone display while charging.
- When the microphone is fully charged, the charging indication stops.

 
VI. Modes

You can enjoy your music in the following ways:

- BT
- USB
- MicroSD
- AUX
- FM


i. BT Mode

- When the device is switched on, it automatically goes to BT mode.
- If any source is connected (USB, MicroSD or AUX), press “MODE” till BT Mode is heard.

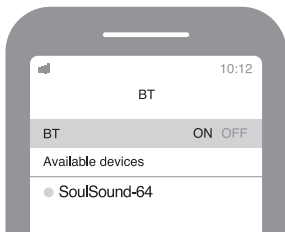

- Make sure that BT is enabled on your device. Find the device list and select “FINGERS SoulSound-64”. A Sound prompt of “Connected” is heard and it is ready to play.

 TWS Setting

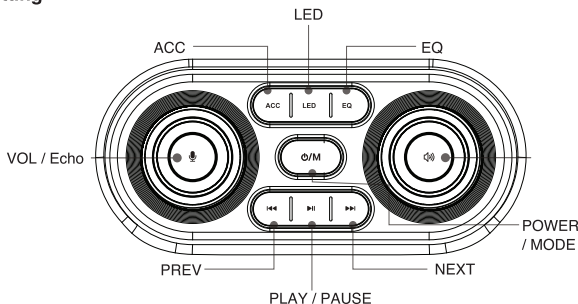

1. Bring two FINGERS SoulSound-64 speakers close to each other and switch ON both speakers.
2. Long press the Play/Pause button on both speakers to enable TWS mode. Both speakers will connect automatically.
3. Enable BT on your device and select "FINGERS SoulSound-64" from the BT device list. Once connected, both speakers will work together in TWS mode

Note: TWS function is supported only between two FINGERS SoulSound-64 speakers in BT mode.

ii. USB

- Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB.



iii. MicroSD

 
- Insert the MicroSD in provided Port.
- You can then play your favourite track directly from the MicroSD Card.



- Insert the MicroSD in the provided Port.
- You can then play your favourite tracks directly from the MicroSD Card.

iv. AUX

When an AUX cable is connected, the speaker automatically switches to AUX mode and plays the audio with priority along with a prompt tone.




ii. FM Radio

- Press on the “Mode” Button till the voice prompt of the word “FM Mode” is heard
- Long press “▶” to scan the stations automatically.
You can again press the same button to stop the scan
- Once the FM radio is tuned, you can long press “▶▶” and “◀◀” to select the desired FM Channel.
- Short press “▶” to mute the FM.

VII. Remote Control

 1. On/Off: Press to switch OFF the speaker.
(Remote does not support Power ON function)
2. Mode: To navigate between BT, USB, MicroSD, AUX and FM Radio modes.
3. TWS/BT : Short Press to enable TWS or long press to BT disconnect/connect.
4. MUTE : Press to mute or unmute the audio.
5. VOL+ : Press to increase the volume level.
6. VOL- : Press to decrease the volume level.
7. CH- : Press to play the previous track. In FM mode, Single press to select the previous saved channel.
8. CH+ : Press to play the next track. In FM mode, Single press to select the next saved channel.
9. PAUSE : Press to play or pause the music.
10. RESET : Press to reset the speaker settings.
11. LED LIGHT : Press to change the LED light effects.
12. BASS+ : Press to increase the bass level.
13. BASS- : Press to decrease the bass level.
14. TREBLE+ : Press to increase the treble level.
15. TREBLE - : Press to decrease the treble level.
16. ECHO + : Press to increase the echo effect level.
17. ECHO - : Press to decrease the echo effect level.
18. MIC+ : Press to increase the microphone volume.
19. MIC- : Press to decrease the microphone volume.
20. MIC PRI, : Press to enable or disable microphone priority mode.
21. EQ : Press to change the equalizer mode.

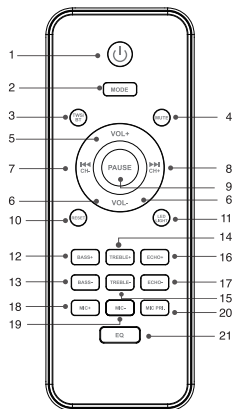

VIII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

X. Product Specifications

Parameters		SoulSound-64
Wireless Protocol		BT v5.3
Peak Output Power		70 W
Power Rating		DC 5V --- 2A
Driver unit		8" 4Ω 30W x 2 + 2" 6Ω 10 W Tweeter
Effective Range		Wireless range up to 10 m
Battery		6000 mAh / 7.4V
Charging Time		Up to 4 hours
Playback Time*		Up to 7 hours
Playback Options		BT USB MicroSD AUX FM Radio
Microphone	Mic Type	Wireless Mic (Mic name: FINGERS Freedom Mic-U104)
	Connector Diameter	6.35 mm
	Polar Pattern	Uni-Directional U-Band
	Controls	10 selectable channels Mic A: 638.8 MHz to 648.0 MHz Mic B: 627.0 MHz to 636.6 MHz
	Power Source	2 x Rechargeable Battery
	Battery Backup	Up to 10 hours
	Charging Time	Up to 4 hours
	Distance Support	Up to 30 m
Dimensions		Speaker: 288 (L) × 276 (W) × 610 (H) mm (H - 650 mm with handle)
		Microphone: 52 (L) × 52 (W) × 252 (H) mm
Weight		Speaker: 6.2 kg Microphone: 238 g for each

fingers.co.in | Ver.: 1.0.0

*Tested under ideal conditions and in BT playback mode.

Playback time may vary depending on usage, playback mode and volume levels.

^Comes with a single Mic port that supports additional wired or wireless microphones.



• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners and protected under IPR. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in