

 
 
fingers[®]



Quick Start Guide


ErgoGrip
Wireless Mouse

I. On-board Controls

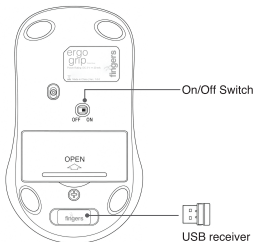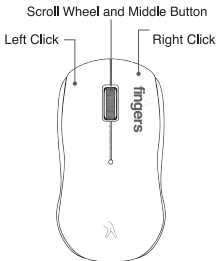

II. Mode

 a. BT Mode:

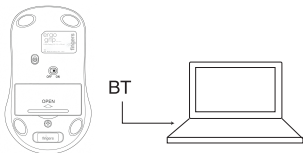


When the mouse is switched ON, it starts in BT mode by default.

How to Connect in BT Mode

1. Insert the battery into the battery compartment located on the bottom of the mouse.
2. Turn ON the mouse using the On-Off switch.
3. The mouse starts in BT mode by default. The blue LED visible through the gap near the scroll wheel from the top view indicates that the mouse is in BT mode.
4. On your device, open the BT settings and search for "FINGERS EG".
5. Select "FINGERS EG" from the available devices and pair the mouse.

If the mouse does not enter BT mode, turn the mouse OFF and then ON again using the On-Off switch.

 b. Wireless Mode:

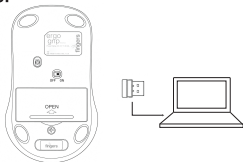

How to Connect in USB 2.4 GHz Mode

1. Insert the battery into the battery compartment located on the bottom of the mouse.
2. Remove the USB receiver/dongle from its storage compartment and insert it into the USB port of your PC or laptop & turn ON the mouse using the On-Off switch.
3. The red LED visible through the gap near the scroll wheel from the top view indicates that the mouse is connected in USB 2.4 GHz mode.

If the mouse is connected via BT, disconnect the BT connection before using USB 2.4 GHz mode.

Mode Switching Note:

- When the mouse is connected in USB 2.4 GHz mode, BT mode will not work simultaneously.
- To use BT mode, remove the USB receiver/dongle and switch the mouse OFF and ON again.
- If the mouse is connected to a device via BT, disconnect the BT connection before using USB 2.4 GHz mode.

III. Product Specifications

Parameters	ErgoGrip
Technology	Optical Technology (2.4 GHz Wireless) + BT v5.2
Button	3 Buttons with Scroll Wheel
Power Source	2 x AAA size Alkaline battery
Wireless	Up to 10 m
Effective Range	
Resolution	1000 DPI
Interface	USB receiver / BT
System Requirements	OS Support: Microsoft® Windows® macOS Linux Chrome OS Interface: USB Port
Dimensions	3.7 (H) x 6.0 (W) x 11.5 (L) cm
Weight	58.6 g

IV. In the box

- 1 x FINGERS ErgoGrip
- 1 x USB Receiver
- 1 x Spinning Top
- 2 x AAA Battery
- 1 x Quick Start Guide
- 1 x Brand Note

V. Important - Warnings & Safety Instructions

1. Do not place the mouse near the heat sources such as radiators, fire, stoves, light candles and other apparatus that produce heat.
2. Focus on your safety and that of others. We recommend keeping it dry and not allow the mouse to get wet or exposed to moisture/rain, which may present the possibility of fire or shock to yourself or others
3. Use only those accessories supplied by FINGERS.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the keyboard has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

CAUTION

This device contains small parts which are hazardous to children. Keep it away from children of age 3 and under.

VI. Care and Maintenance

1. Switch off the mouse before cleaning it.
2. Use a soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

fingers.co.in | Ver.1.0.0

*Tested under ideal conditions and varies depending on usage.

* Images shown may vary from actual product.

* Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in

