fingers



Quick Start Guide

3D-Trance ANC

Wireless Headphone

I. Important - Warnings and Safety

1.While placing the headphone in your ears, please keep the volume down and then gradually adjust the volume to an appropriate, comfortable level.

2. Prolonged use at high volumes might damage your hearing.

3. Focus on your safety and of others. We recommend not to listen music while riding or driving, or at any time when the inability to hear surrounding sounds may present a danger to yourself or others.

4. If you experience a warm sensation or loss of audio, do remove and disconnect immediately.

5. Do not place the headphone near heat sources such as fire, radiators, stoves, light candles and other apparatus that produces heat.

6. Use only those accessories supplied by FINGERS.

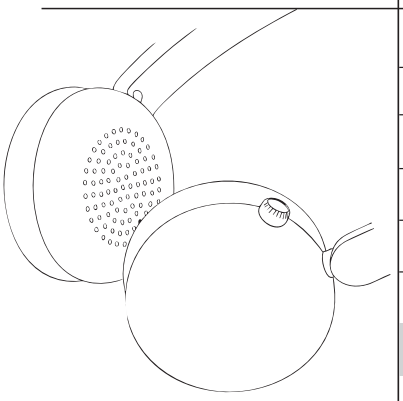
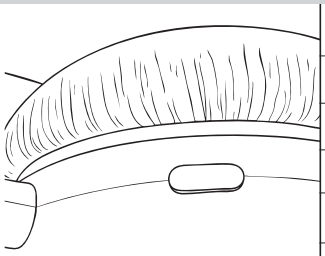
7. Unplug the headphone once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.

8. It is recommended to refer all servicing to qualified personnel. Servicing is required when the device has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box

1 x FINGERS 3D-Trance ANC
1 x USB Type-C Charging Cable
1 x Zip Case
1 x Quick Start Guide
1 x Brand Note

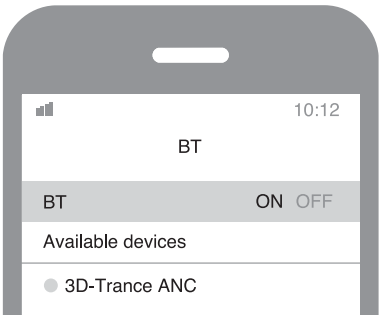
III. On-board Controls

Button	Function	What to do
	**1. GrooveKnob (MFB)**	
	On/Off	Long Press
	Play/Pause	Short Press
	Next Track	Double Press
	Previous Track	Triple Press
	Volume Up/Down	Rotate the Knob
	During Calls	
	Receive Call	Short Press
	End Call	Again, Short Press
	Reject incoming call	Long Press
	**2. Function Key**	
	ANC Mode	Short Press
	Spatial Audio Mode	Double Press
	Voice Assistance	Triple Press
	Low Latency Mode	Press Four times

IV. Charging

- An Orange light indicates that it is in charging mode.
- Once it is completely charged, the LED glow changes to White.

V. Enjoy music via Bluetooth®



- Long Press GrooveKnob to switch on the headphone till the LED indicator starts flashing in white and orange alternately, signifying that it is ready to pair a device.
- As it flashes white and orange alternately, make sure that Bluetooth® is enabled on your device. Find the device list and select “3D-Trance ANC”.
- The indicator flashes in white for a moment, a sound connected is heard and it is ready to play.

Repeat above steps to pair another device.

Please note: To reset the paired device, long press GrooveKnob and Function Key at the same for at least 5 secs.

VI. Care and Maintenance

1.Switch off the device before cleaning it.

2. Use soft, damp cloth to clean the surface.

3.Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.

4. Do not allow any liquid to enter into any of the openings.

VII. Product Specifications

Parameters	3D-Trance ANC
Wireless Protocol	Bluetooth® v5.4
Driver unit	40 mm, Dynamic Driver
Effective Frequency Range	2.402 GHz ~ 2.480 GHz
Effective Range	Up to 10 meters
ANC Range	20 - 600Hz
ANC noise reduction	-30 ± 3 dB
Battery	1000 mAh Lithium-ion battery (3.7V)
Charging Time	Around 3.5 hours
Playback Time*	120 hours
Talktime*	About 58 hours
Standby Time	About 285 hours
Playback Options	Bluetooth®
Dimensions	161 (L) x 62 (W) x 184.47 (H) mm
Weight	147 g

fingers

EPR Details

fingers.co.in

Ver.:1.0.0

*Tested under ideal conditions and in BT playback mode. Playback time may vary depending on usage, playback mode and volume levels.

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in