fingers®

Quick Start Guide

RollingParties-124

Multimedia Speaker

I. Important - Warnings and Safety

1. Do not place the speaker & Mics near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker/Mic once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box

1 x FINGERS RollingParties-124
2 x FINGERS Freedom Mic-G124 Microphones (2.4 GHz)
1 x AUX cable
1 x Power Adapter

1 x FINGERS RollingParties-124
2 x FINGERS Freedom Mic-G124 Microphones (2.4 GHz)
1 x AUX cable

III. Connections



Port	Description
USB Port	Insert a USB device to play music directly from the USB.
TF Card Slot	Insert a MicroSD/TF card to play music directly from the card.
AUX Input	Connect an external audio device using an AUX cable.
Guitar Input	Connect a guitar for audio playback through the speaker.
Mic 1 Input	Connect a wired microphone/receiver.
Mic 2 Input	Connect a second wired microphone/receiver.
DC 15V Input	Connect the supplied power adapter for charging and power supply

IV. On-board Controls

A. Speaker

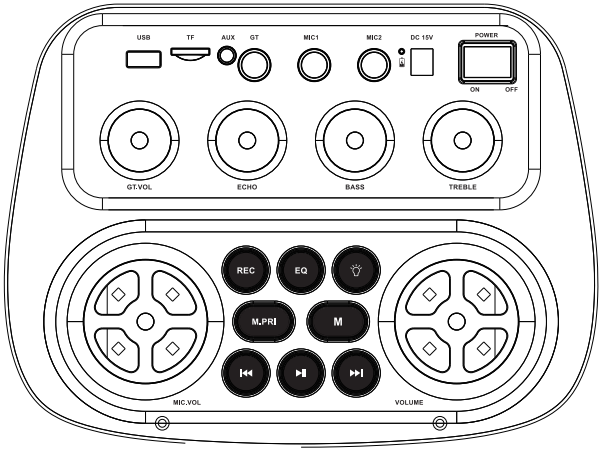

Button / Control	Description
On-Off Switch	To turn the speaker ON or OFF.
Guitar Volume Knob	Rotate to increase or decrease the guitar volume.
Echo Knob	Rotate to increase or decrease the echo effect level.
Bass Knob	Rotate to increase or decrease the bass level.
Treble Knob	Rotate to increase or decrease the treble level.
Record Button	Press to start or stop recording.
EQ Button	Press to change the equalizer mode.
LED Button	Press to change the LED light effects.
Mic Priority Button	Press to enable or disable microphone priority mode.
Mode Button	Press to navigate between BT, USB, MicroSD, AUX & FM Radio modes.
Previous Button	Press to play the previous track.
Play/Pause Button	Press to play or pause the music.
Next Button	Press to play the next track.
Mic Volume Knob	Rotate to increase or decrease the microphone volume.
Master Volume Knob	Rotate to increase or decrease the overall speaker volume.

B. Microphone (FINGERS Freedom Mic-G124)

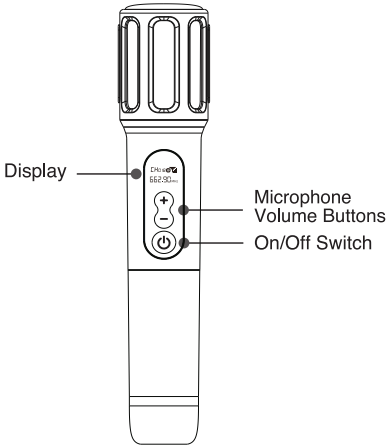

Function	Description
Power On-Off	Short Press: Power On Long Press: Power Off
Display On	The MIC is in working state

a. For Wireless Microphone

- When the speaker and the bundled microphone are switched on at the same time, the 2.4GHz wireless connection pairs automatically.
- At this time, the user can start using the microphone and can operate the buttons according to their own preferences.

b. For Wired Microphone

- Connect the wired microphone to the Mic Port.
- At this time, the user can start using the microphone and can operate to their own preferences.

V. Charging

i. Speaker

• Connect the supplied DC 15V power adapter to the DC 15V input port on the speaker.
• Plug the adapter into a power outlet to begin charging.
• When on Charging, the LED indicator is in red.
• When fully charged, the LED indicator turns off.

ii. Microphone

• Connect a Type-C cable to the Type-C port on the microphone to charge it.
• While charging, the red charging indicator remains ON.
• When the microphone is fully charged, the charging indicator turns OFF.
• Disconnect the charging cable after the microphone is fully charged.

VI. Modes

You can enjoy your music in the following ways:

i. BT
ii. USB
iii. TF Card
iv. AUX
v. FM

i. BT Mode

- When the device is switched on, it automatically goes to BT mode.
- If any source is connected (USB, TF Card or AUX), press "MODE" till BT Mode is heard.

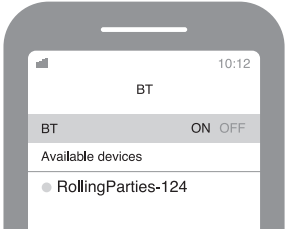

- Make sure that BT is enabled on your device. Find the device list and select "FINGERS RollingParties-124". A Sound prompt of "Connected" is heard and it is ready to play.

TWS Setting

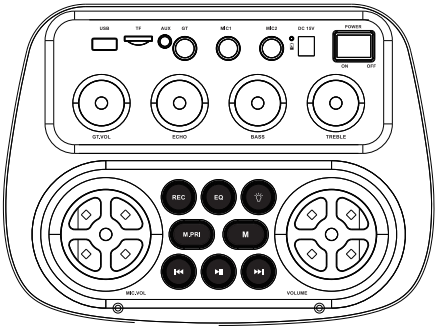

1. Bring two FINGERS RollingParties-124 speakers close to each other and switch ON both speakers.
2. Long press the Play/Pause button on both speakers to enable TWS mode. Both speakers will connect automatically.
3. Enable BT on your device and select “FINGERS RollingParties-124” from the BT device list. Once connected, both speakers will work together in TWS mode.

Note: TWS function is supported only between two FINGERS RollingParties-124 speakers in BT mode

ii. USB

- Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB.

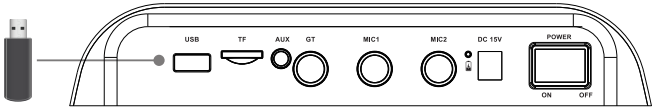

iii. TF Card

- Insert the TF Card in provided port.
- You can then play your favourite tracks directly from the TF Card.

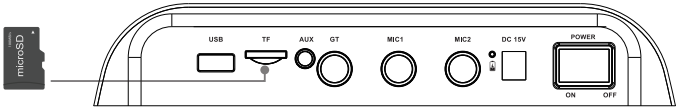

iv. AUX

When an AUX cable is connected, the speaker automatically switches to AUX mode and plays the audio with priority along with a prompt tone.

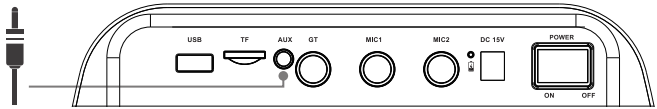

v. FM Radio

- Press on the “Mode” button till the voice prompt of the word “FM Mode” is heard
- Long press “⏯” to scan the stations automatically.
  You can again press the same button to stop the scan
- Once the FM radio is tuned, you can long press “ ⏭ ” and “ ⏮ ” to select the desired FM Channel.
- Short press “⏯” to mute the FM.

VII. REMOTE CONTROL

1. On/Off : Press to switch OFF the speaker.
2. Mode: To navigate among different Modes of BT, USB, MicroSD, AUX and FM radio.
3. Stop: To stop the current playback.
4. Play/Pause: Single press to play and pause the playlist.
5. Mute: Short press to enable mute; press again to disable mute.
6. Vol+: Short press to increase the volume.
7. Next Track: Short press to go to the next track.
8. Prev Track: Short press to go to the previous track.
9. Vol-: Short press to decrease the volume.
10. RPT: To repeat the track in two ways in USB/TF card mode in order of One-All
    One : Repeats the current track.
    All : Plays all songs repeatedly.
11. EQ : Short press to change the EQ modes.
12. 0 to 9 : To select desired track/saved FM Channel in USB, TF Card and FM Modes.

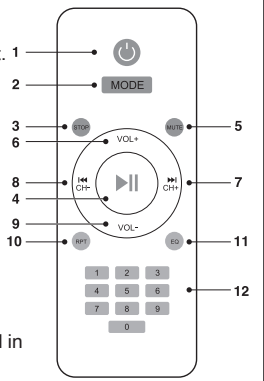

VIII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

IX. Product Specifications

Parameters		RollingParties-124
Wireless Protocol		BT v5.3
Peak Output Power		120 W
Power Rating		DC 15 V / 2 A
Driver unit		8" 4Ω 40W x 2 + 10W Tweeter *2
Effective Range		Wireless range up to 10 m
Battery		4000 mAh (Li-ion)
Charging Time		Up to 3 hours
Playback Time*		6 hours
On Device Controls		On/Off Switch I Guitar Volume Knob I Echo Knob I Bass Knob I Treble Knob I Record Button I EQ Button I LED Button I Mic Priority Button I Mode Button I Previous Button I Play/Pause Button I Next Button I Mic Volume Knob I Master Volume Knob
Playback Options		BT I USB I TF Card I AUX I Guitar Input I Mic 1 Input I Mic 2 Input
Microphone	Mic Type	Wireless Mic (Mic name: FINGERS Freedom Mic-G124)
	Connector Diameter	6.35 mm
	Polar Pattern	Uni-Directional 2.4 GHz
	Power Source	2 x Rechargeable Battery
	Battery Backup	Up to 35 hours
	Charging Time	Up to 3 hours
	Distance Support	15 - 25 m
Dimensions		Speaker: 328 (L) x 340 (W) x 760 (H) mm Mic: 235 (L) x 46.6 (W) x 45 (H) mm
Weight		Speaker: 11.9 kg, Mic: 256 g (with battery)

fingers.co.in I Ver.: 1.0.0

EPR Details

*Tested under ideal conditions and in BT playback mode.
Playback time may vary depending on usage, playback mode and volume levels.

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners and protected under IPR. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in