fingers

Freedom Mic-U221

Quick Start Guide

I. Important - Warnings and Safety


1. Do not place the product near heat sources such as fire, radiators, stoves, light candles and other apparatus that produce heat.
2. Use only those accessories supplied by FINGERS.
3. Unplug the devices once they are fully charged or when unused for long periods or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the device has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing or removal of any of the labels will void the Limited Warranty.

II. In the box


2 x Wireless Mics of FINGERS Freedom Mic-U221
1 x Wireless Receiver (6.35 mm)
1 x Type-C Charging Cable
3 x Rechargeable Battery
1 x Quick Start Guide
1 x Brand Note

III. On-board Controls

1.Microphone

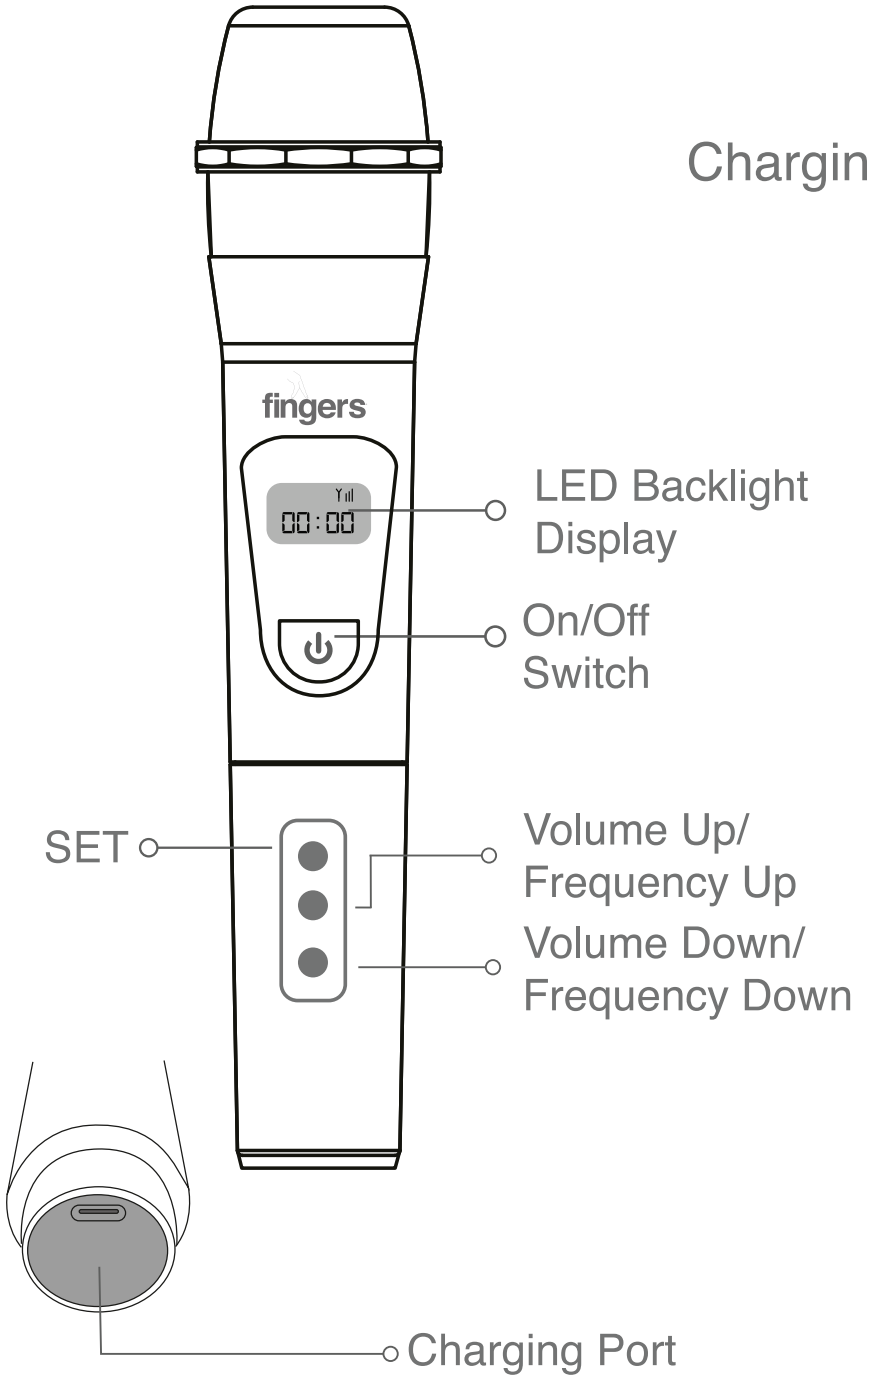

2. Receiver

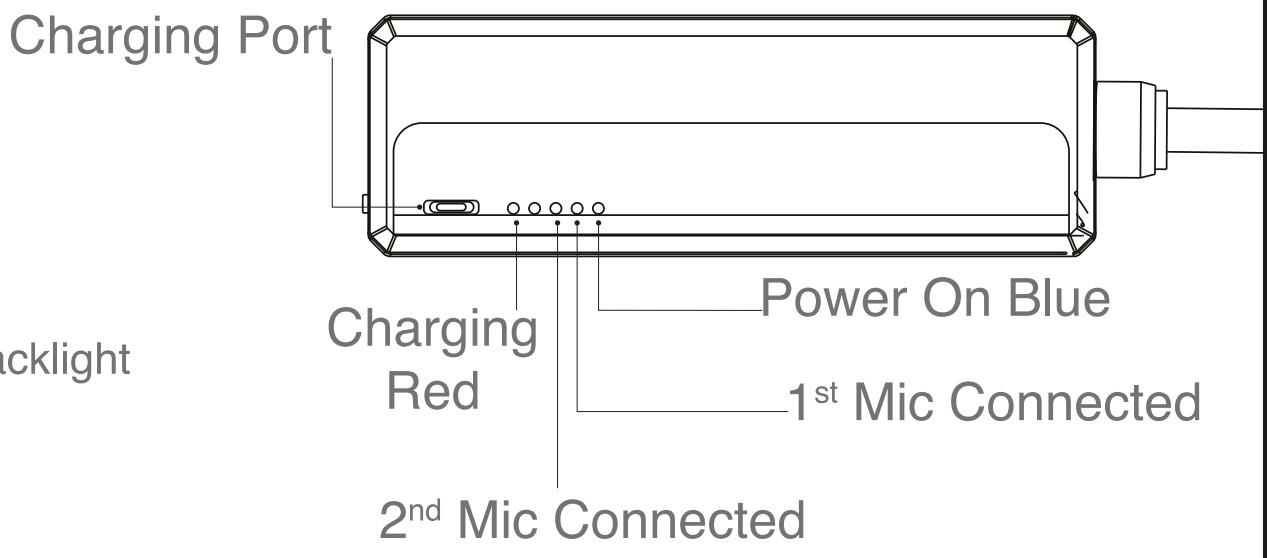

Microphone:

Function	*Description*
1. Power On/OFF	Short Press Power On Long Press Power Off
2. Display On	The MIC is at working state
3. SET	To set Frequency and Volume of Mic
4. Frequency Up/Volume Up	When SET is at Volume - Increase the Volume When SET is at Frequency - Increase the frequency channel
5. Frequency Down/Volume Down	When SET is at Volume - Decrease the Volume When SET is at Frequency - Decrease the frequency channel

Note: Open the Cover at bottom of the mic to set the desired Frequency and Volume as the image alongside.

Frequency Setting Guide

1. Connect the receiver to the speaker.
2. Turn on the microphone by pressing the Power button.
3. To lock the microphone frequency,
   press and hold the Power + Volume Up buttons
   simultaneously for a few seconds.
4. The microphone display will start blinking.
5. Turn the receiver OFF and then switch it ON again.
6. Press the SET button on the microphone.
7. The frequency will now be locked and the
   microphone is ready for use.

Note:

- If you do not press the SET button after selecting the frequency, the new frequency will not be saved.
- To connect another set of Mics, follow the same process using a different frequency.

Receiver:

Wireless Receiver	*Description*
Power On-Off	Slide the switch to On-Off the receiver
Type-C port	Charging port of receiver
	a. Power On: Blue LED
	b. Charging Mode: Red LED
	c. 1st Mic Connected: Red LED
	d. 2nd Mic Connected: Orange LED

IV. Charging of Wireless Receiver/ Wireless Mic

- Red LED indicates that it is in charging mode.
- Use Type-C Cable to charge the Receiver and both Mics.

V. Connecting the Microphones in a Pair and Locking the Frequency

1. Connect the Receiver to the speaker and switch on the Receiver.

2. To pair the Mics, you need to lock the frequency of one of the Mics. Switch on any one of the Mics - it will automatically connect to the receiver. Now, to lock the Frequency, press and hold the Power On-Off and Volume Up buttons together. The mic will enter pairing mode and display “1d - - ” on the Display screen.

3. Next, turn the receiver off and on again, and then press the Set button on the mic. The mic will now be paired with the Receiver.

4. Once the 1st mic is paired, the 2nd mic in the set will not require frequency locking - it will connect automatically.

   To connect a 2nd Set of Mics, repeat the same procedure as above.

Note:

1. To connect 4 mics, two sets of FINGERS Freedom Mic-U221 are required.
2. Ensure that each of these 4 Mics operates on a different frequency.

VI. Care and Maintenance

1. Switch off the Mics before cleaning it.
2. Use a soft, damp cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter any of the openings.

VII. Product Specifications

Parameters	***Freedom Mic-U221***
Mic Type	Moving coil
Connector Diameter	6.35 mm (Receiver)
Polar Pattern	Uni-directional
Controls	Volume 1 to 20 Variable Frequency - Mic A: UHF 650 to 668.5 MHz Mic B: UHF 670 to 684.5 MHz
Power Source	Microphone: In-built battery 1200 mAh @ 3.7 V Receiver: In-built battery 1200 mAh @ 3.7 V
Battery Backup	Receiver: Up to 10 hours Wireless Mic: Up to 10 hours
Charging Time	Receiver (Type C):Up to 4 hours
Distance Support	50 m
Dimension	264 (H) x 51 (W) mm
Net Weight	Microphone: 370 g Receiver: 70 g (with battery)

Stay connected with us

@fingers.co.in @FingersIndia @FingersIndia

Customer Service

- Support email: customer.care@fingers.co.in
- +91-74004 88454 : Mon - Fri (9.30 am to 6.30 pm)

For further information, please visit www.fingers.co.in

EPR Details

*Tested under ideal conditions. Battery back-up time may vary depending on usage, playback mode and volume levels. The receiver has a battery back-up of up to 3 hours.

- Images shown may vary from actual product.
- Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in

Ver.:1.0.0