fingers



Quick Start Guide

RollingParties-204

Multimedia Speaker

I. Important - Warnings and Safety

1. Do not place the speaker & Mics near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker/Mic once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box

1 x FINGERS RollingParties-204
2 x FINGERS U111 Microphones (U-Band)
1 x AUX Cable
1 x Power Cord
1 x Remote Control
4 x AA Battery for Mic
2 x AAA Battery for Remote
1 x Quick Start Guide

III. Connections

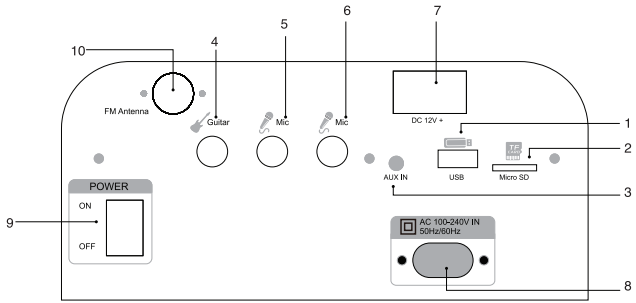

	Port	Description
1	USB Port	Insert a USB device to play music directly from the USB.
2	TF Card Slot	Insert a MicroSD/TF card to play music directly from the card.
3	AUX Input	Connect an external audio device using an AUX cable.
4	Guitar Input	Connect a guitar for audio playback through the speaker.
5	Mic 1 Input	Connect a wired microphone using a compatible microphone cable.
6	Mic 2 Input	Connect a second wired microphone using a compatible microphone cable.
7	DC 12V Input	Connect an external 12V DC battery to power the speaker.
8	Input Socket	Connect the AC power cord to the speaker for power supply.
9	On-Off Switch	Turn the speaker power ON or OFF.
10	FM Antenna	Extend the antenna to improve FM radio signal reception.

IV. On-board Controls

A. Speaker

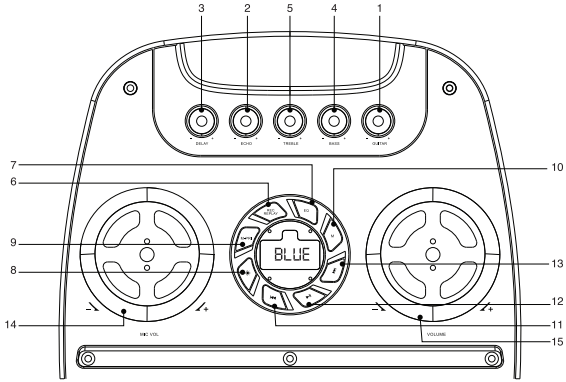

	Control	Description
1	Guitar Volume Knob	Adjusts the guitar volume.
2	Echo Knob	Adjusts the microphone echo effect.
3	Mic Delay Knob	Adjusts the microphone delay effect.
4	Bass Knob	Adjusts the bass level.
5	Treble Knob	Adjusts the treble level.
6	Record/Replay Button	Long press to start recording. Short press to playback the recorded audio. Note: it will record when USB & MicroSD inserted in the speaker
7	EQ Button	Press to select the available equalizer sound modes (Normal, Pop, Rock, Jazz, Classical).
8	LED Button	Press to change the LED light effects. Press and hold the button to switch on and off the LED lights.
9	Mic Priority Button	Press to activate microphone priority mode. The music volume is reduced when the microphone is in use.
10	Mode Button	Press to navigate between BT, USB, MicroSD, AUX and FM Radio modes.
11	Previous Button	Press to select the previous track.
12	Play/Pause Button	Press to play or pause the current track.
13	Next Button	Press to select the next track.
14	Mic Volume Knob	Adjusts the microphone volume.
15	Master Volume Knob	Adjusts the overall speaker volume.

Note: To switch on the speaker after it enters power-saving mode, press the Mode (M) button once.

B. Microphone (FINGERS U111)

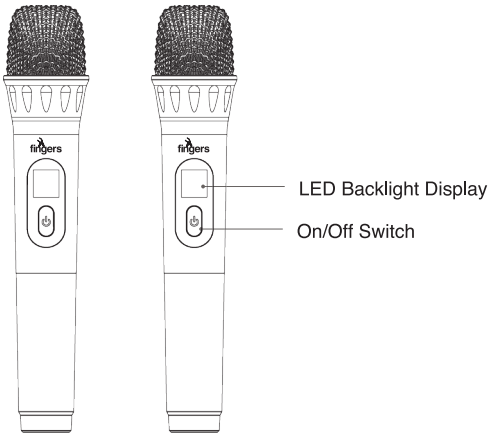

Function	Description
Power On-Off	Short Press: Power On Short Press: Power Off
Display On	The Mic is at working state

Microphone Connection
When the speaker and the bundled wireless microphone are switched on, they automatically pair with each other.

To connect an additional microphone, plug a wired microphone into the MIC port or insert the receiver of a wireless microphone into the MIC port 1 / 2 on the speaker. The microphone will then be ready for use.

V. Charging of Speaker

- Connect the speaker using the provided two-pin power cord.
- During charging, the battery indicator on the display will blink. Once the battery is fully charged, the battery indicator on the display will stop blinking.

VI. Modes

You can enjoy your music in the following ways:

i. BT
ii. USB
iii. MicroSD
iv. AUX
v. FM

i. BT Mode

- When the device is switched on, it automatically goes to BT mode.
- If any source is connected (USB, MicroSD or AUX), press “MODE” till BT Mode is heard.
- Make sure that BT is enabled on your device. Find the device list and select “FINGERS RollingParties-204”. A Sound prompt of “Connected” is heard and it is ready to play.



TWS Setting

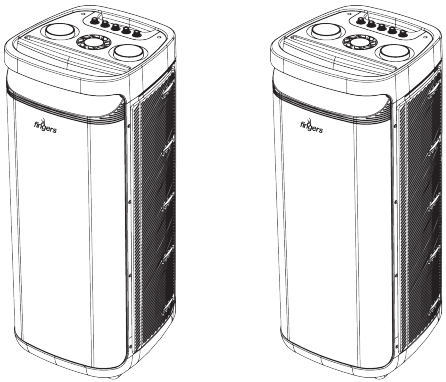

1. Bring two FINGERS RollingParties-204 speakers close to each other and switch ON both speakers.
2. Long press the Play/Pause button on both speakers to enable TWS mode. Both speakers will connect automatically.
3. Enable BT on your device and select “FINGERS RollingParties-204” from the BT device list. Once connected, both speakers will work together in TWS mode.

Note: TWS function is supported only between two FINGERS RollingParties-204 speakers in BT mode.

ii. USB

- Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB.

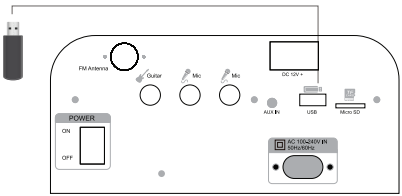

iii. MicroSD

- Insert the MicroSD in provided Port.
- You can then play your favourite track directly from the MicroSD Card.

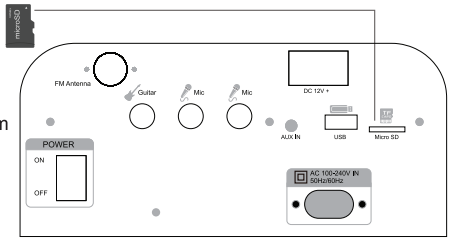

iv. AUX

When an AUX cable is connected, the speaker automatically switches to AUX mode and plays the audio with priority along with a prompt tone.

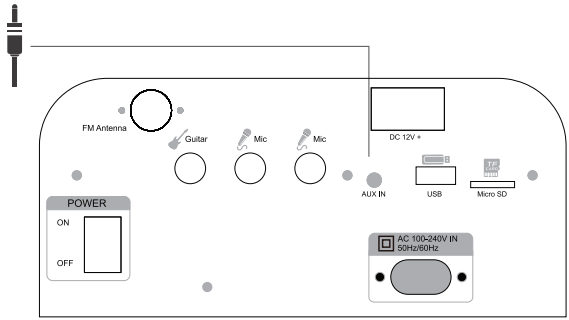

v. FM Radio

- Press on the “Mode” Button till the voice prompt of the word “FM Mode” is heard
- Single press “ ⏯ ” to scan the stations automatically. You can again press the same button to stop the scan
- Once the FM radio is tuned, you can long press “ ⏭ ” and “ ⏮ ” to select the desired FM Channel.
- Short press “ ⏯ ” to mute the FM.

Note: The speaker operates in FM mode without RGB lighting.

VII. Remote Control

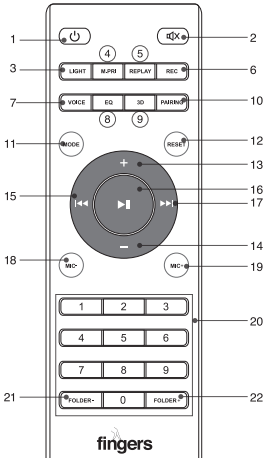

1	Power	Press to turn the speaker ON or OFF.
2	Mute	Press to mute or restore the speaker audio output.
3	Light	Press to turn the speaker LED lights ON/OFF or change the available light effects.
4	M.Pri	Press to activate or change the microphone priority function.
5	Replay	Press to replay the current track or playback content.
6	Rec	Press to start or stop the recording function.
7	Voice	Press to turn the Vocal Cut (ACC) mode ON or OFF. This function reduces or removes the vocal from the music, allowing you to use the speaker for karaoke.
8	EQ	Press to select the available equalizer modes. Add eq modes
9	3D	Press to activate or deactivate the 3D sound effect. Note: The 3D sound effect can be enjoyed in TWS mode.
10	Pairing	Press to activate BT pairing mode.
11	Mode	Press to navigate between the available modes: BT, USB, MicroSD, AUX, and FM Radio.
12	Reset	Press to reset the applicable settings/functions.
13	Volume +	Press to increase the speaker volume.
14	Volume –	Press to decrease the speaker volume.
15	Previous	Press to select the previous track.
16	Play/Pause	Press to start or pause playback.
17	Next	Press to select the next track.
18	Mic–	Press to decrease the microphone volume.
19	Mic+	Press to increase the microphone volume.
20	0–9 Numeric Buttons	Press to select the desired track in USB/MicroSD mode or the saved FM channel in FM mode.
21	Folder–	Press to select the previous folder.
22	Folder+	Press to select the next folder.

VIII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

IX. Product Specifications

Parameters		RollingParties-204
Wireless Protocol		BT v5.0
Peak Output Power		Peak - 200 W
Power Rating		220 - 240V, 50 Hz, 2 A
Effective Range		Wireless range up to 10 m
Battery		12V/ 7000mAh
Charging Time		Up to 3.5 hours
Playback Time*		Up to 11 hours
Playback Options		BT I USB I MicroSD I AUX I FM Radio I Guitar Input I Mic 1 Input I Mic 2 Input I DC12V Jack
Microphone	Mic Type	Wireless Mic
	Connector Diameter	6.35 mm
	Polar Pattern	Uni-Directional U-Band
	Frequency	Mic-A: 675.30 MHz Mic-B: 681.30 MHz
	Power Source	4 x AA size batteries
	Battery Backup	Up to 10 hours
	Distance Support	25 m
Dimensions		Speaker: 373 (L) x 346 (W) x 860 (H) mm
		Microphone: 50 (L) x 50 (W) x 250 (H) mm
Weight		Speaker: 15.3 kg Each Mic: 332 g (with battery)
Colours		Rich Black

fingers.co.in I Ver.: 1.0.0

*Tested under ideal conditions and in BT playback mode.
Playback time may vary depending on usage, playback mode and volume levels.
^Comes with a single Mic port that supports additional wired or wireless microphones.

EPR Details

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice. • All logos, brands, trademarks and product names are properties of their respective owners and protected under IPR. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in