

Quick Start Guide

PhoneMic-Lightning
Wireless Mic



I. Important - Warnings and Safety Instructions

1. To avoid accidental ingestion, keep the PhoneMic away from small children and pets. The PhoneMic contains a lithium battery and may be hazardous if swallowed. If ingested, seek immediate medical attention. When not in use, place the earbuds in the charging case with the lid closed, thereby keeping them out of reach from small children and pets.
2. Do not place the product near heat sources such as fire, radiators, stoves, light candles and other apparatus that produce heat.
3. Use only those accessories supplied by FINGERS.
4. Unplug the Charging Case once it is fully charged or when unused for long periods or during lightning/thunderstorms.
5. It is recommended to refer all servicing to qualified personnel. Servicing is required when the device has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing or removal of any of the labels will void the Limited Warranty.

II. Care and Maintenance


1. Switch off the device before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

III. In the box

- 1 x FINGERS PhoneMic-Lightning (1 x Mic + 1 x Receiver)
- 1 x Type-C Charging Cable
- 1 x Wind-muff Filter
- 1 x Zip Pouch
- 1 x Quick Start Guide
- 1 x Brand Note

III. On-board Controls

1. Mic Indicator
2. On/Off Switch
3. Mic charging port
4. Receiver Indicator
5. Lightning Port
6. Receiver Charging Port

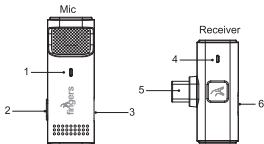


Function	What to do
Microphone (Mic)	
1. On/Off Key	
On and off	Press for 3 Secs
Mute	Short Press
Reverb	Double Press
2. Receiver	Connect to the mobile

IV. Charging

i. Microphone


a) Charge Microphone Transmitter through its Type-C

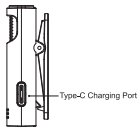

- Charge Microphone Transmitter through its Type-C charging port. It will take around 1.5 hours to charge.
- When battery of transmitter is low, the indicator will blink in red light.
- The transmitter can be charged through the charging cable.

Note: Please do not charge microphone transmitter when you are using it since this will cause the microphone transmitter to shut down.


ii. Charging Phone

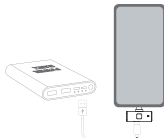

- When your phone's battery is low, you can charge it through the Lightning Port of the receiver.
- Connect the receiver with the Lightning charging cable with phone.


V. How to Use

- Step 1: Plug the microphone receiver into the phone and the indicator turns green.



(If Receivers' indicator doesn't turn green after plug-in, you need to search "OTG" - turn on OTG Power Supply)

- Step 2: Press On-Off button on microphone transmitter for 3 seconds and the indicator will turn green.

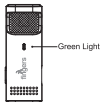

Note:

The first use of the unit, both microphone transmitter and receiver will go into sync mode. During sync mode, the indicator of microphone transmitter flashes red and green. Once the sync is successful, the microphone indicator will turn green.

- Step 3: Open the recorder or Live app to pick up the sound.

(Some phones do not support an external microphone for the built-in camera. If video recorded with built-in camera has no sound, please download other camera apps to be able to pick up the sound.)

Noise Reduction

Once the microphone's transmitter is turned on, the noise reduction function is activated automatically. No operation is required.

VI. Product Specifications

Parameters	PhoneMic-Lightning
Technology/Connectivity Type	2.4 GHz Wireless Technology
Mic Type	MEMS Microphone
Polar Pattern	Omnidirectional
Power Source	5 V, 1 A Max.
Battery Capacity	70 mAh
Battery Backup	Up to 6 hours
Charging Time	Up to 1.5 hours (with Type-C)
Transmission Range	Up to 20 m, free of obstacles
Transmission Delay	15 m/s
Dimension	Wireless Mic: 15 x 14 x 45 mm (L x W x H)
	Receiver: 40 x 5 x 24 mm (L x W x H)
Net Weight	Each Wireless Mic: 9 g
	Receiver: 6 g

fingers.co.in | Ver.: 1.0.0

*Tested under ideal conditions and varies depending on usage and volume levels.

- Images shown may vary from actual product.
- Specifications, features and appearance are subject to change without notice.
- All logos, brands, trademarks and product names are properties of their respective owners and protected under IPR.
- Product warranty is governed by warranty terms mentioned on www.fingers.co.in
- This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in
- Safety note: • When in use, please adjust the volume to appropriate level.
- Excessive use at high volumes may damage your hearing.